


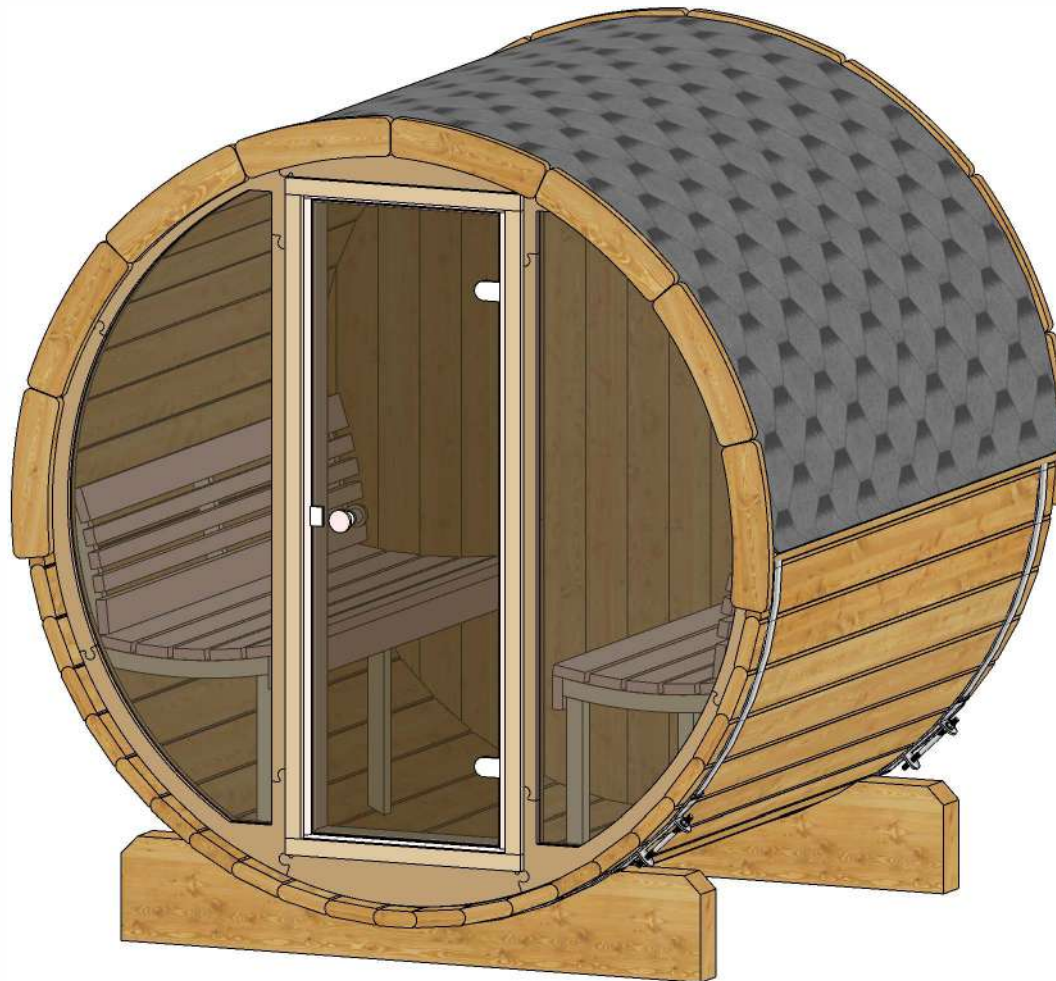



Ergo-Series E8G Barrel Sauna
Full Glass Front 87D" x 81H"



Note: Please read manual before construction


Rev 4/2023

Front & Back Walls

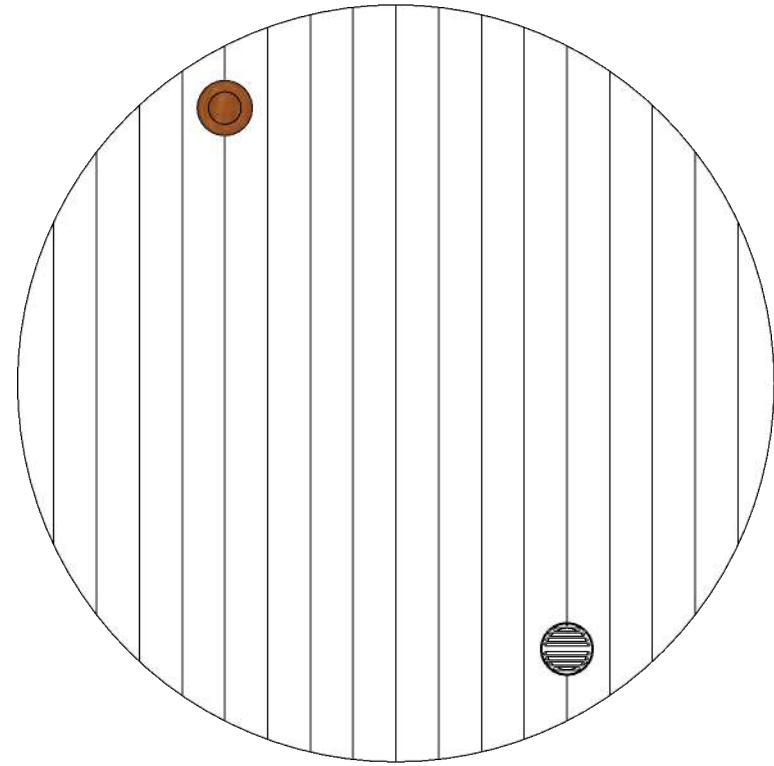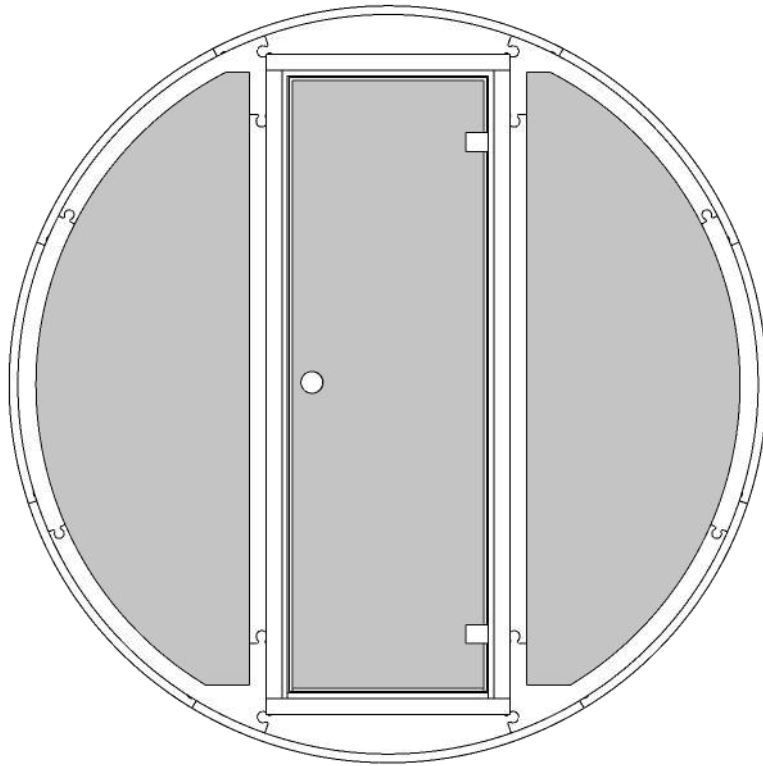


E8G Barrel Sauna 87D" x 81H"


Details list.

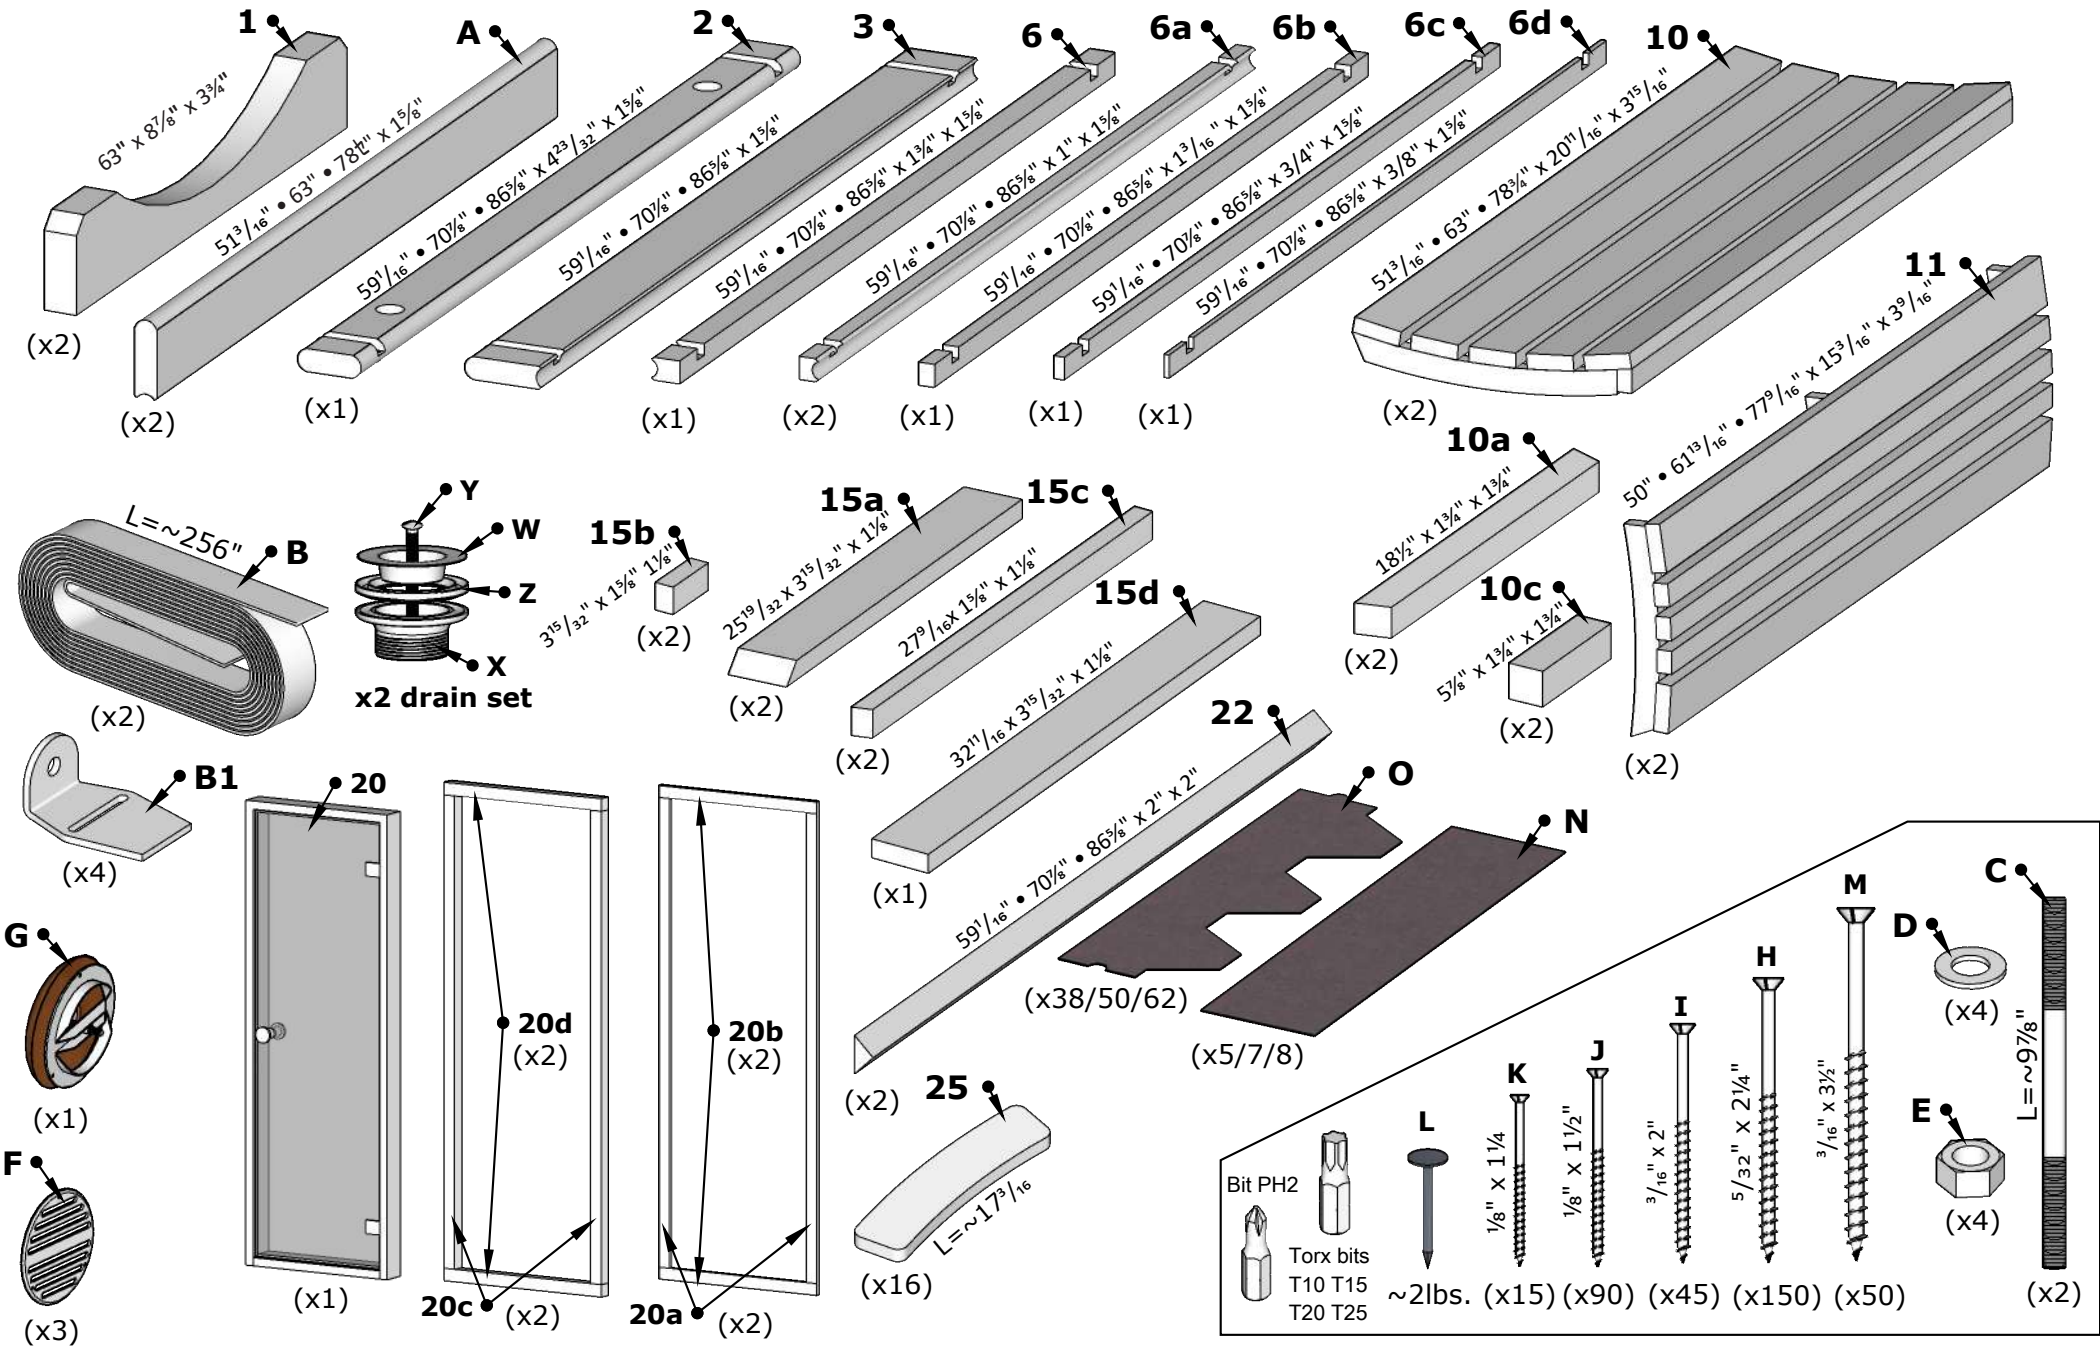


Tools needed

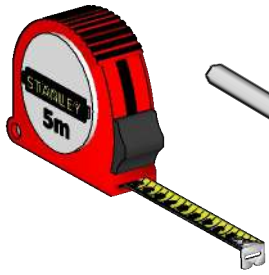


Measuring tape

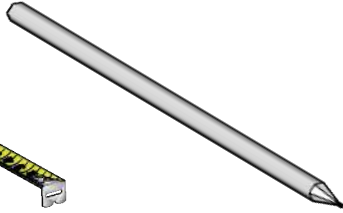


Marker pen

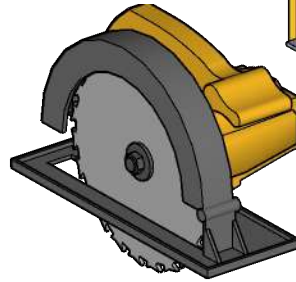

Circular saw

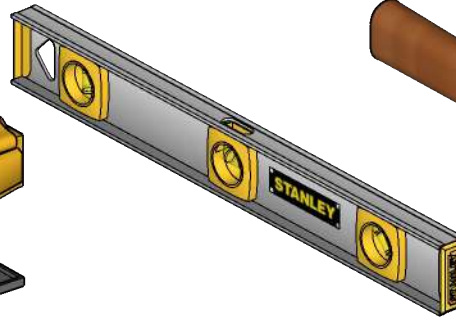

Water level

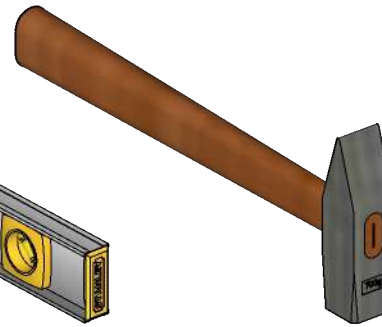


Hammer




Extra hands




Ratchet strap

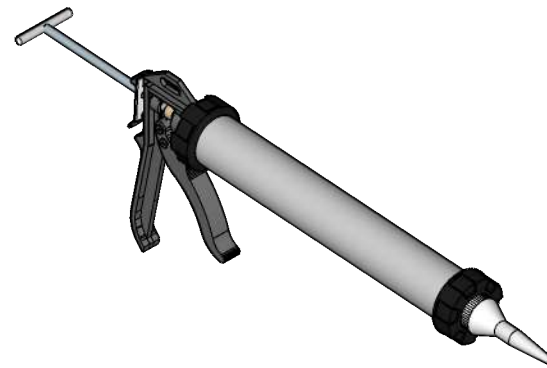

Silicone gun
(Only glass-wall models)

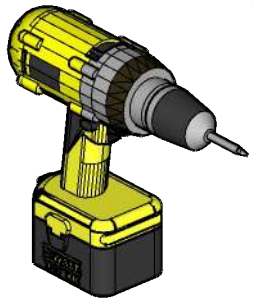


Drill

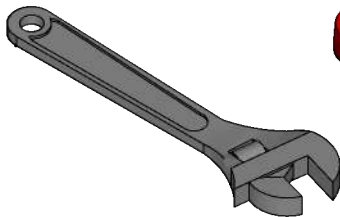

Crescent wrench






Utility knife





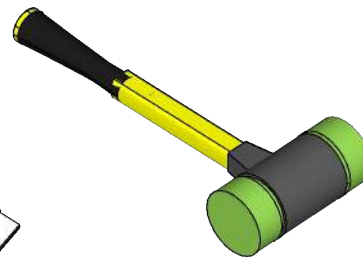


Rubber mallet


Front glass wall installation

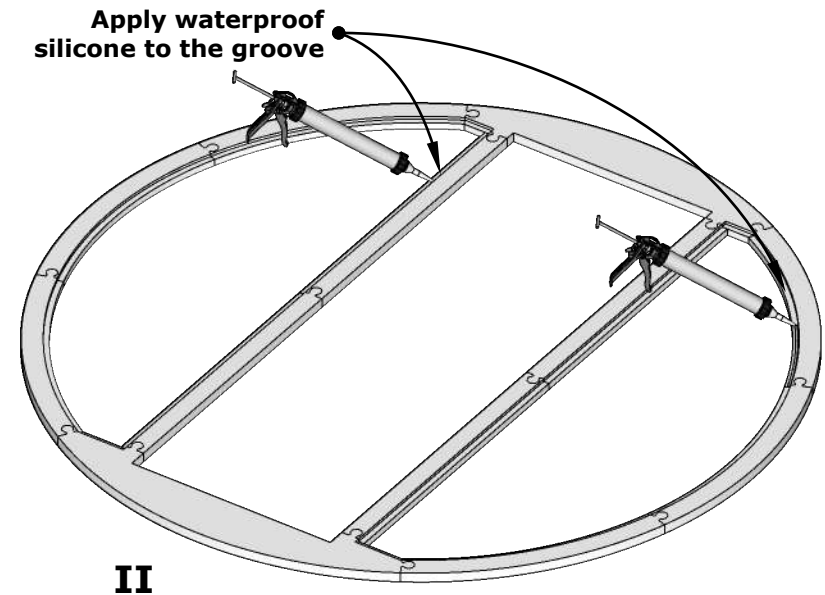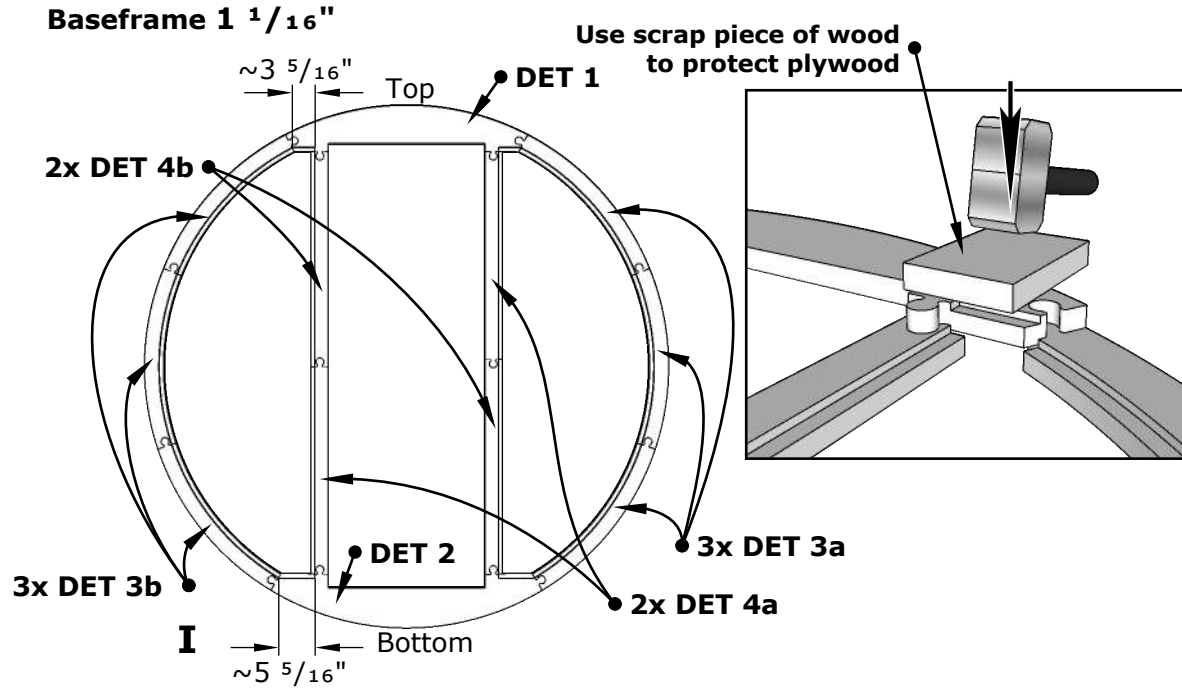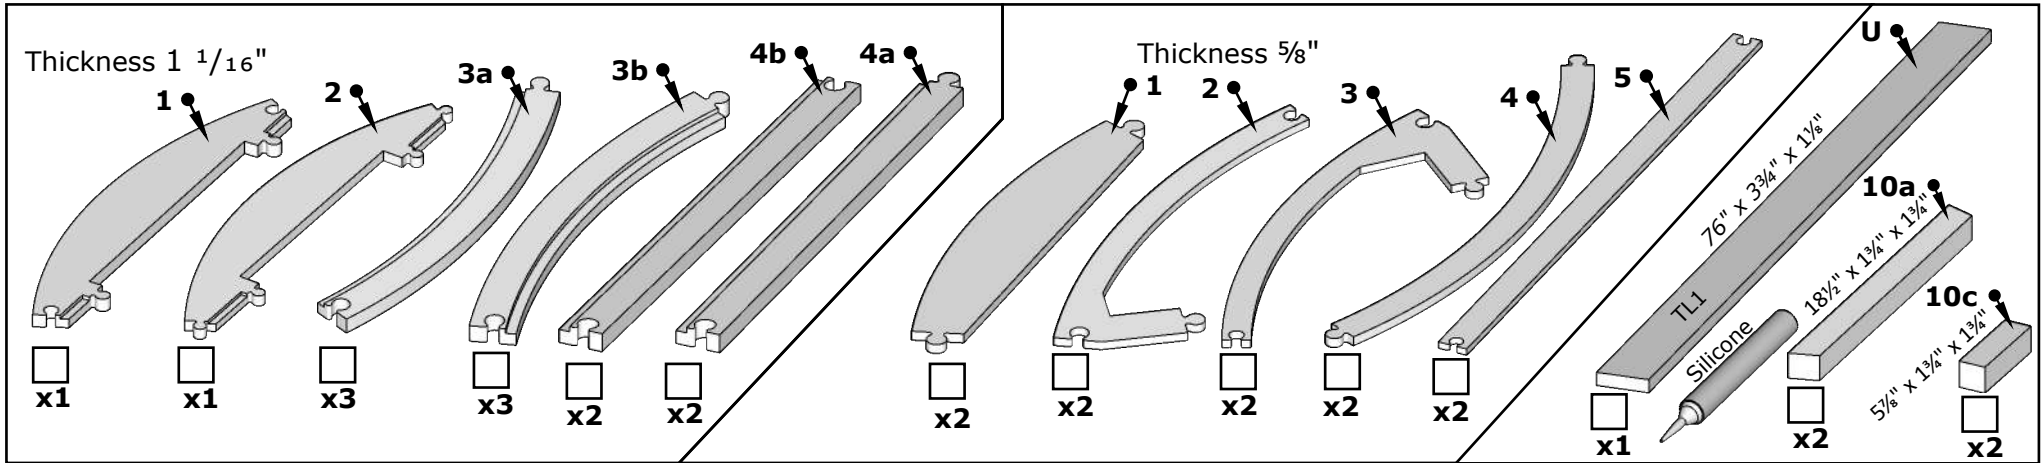


Front glass wall installation

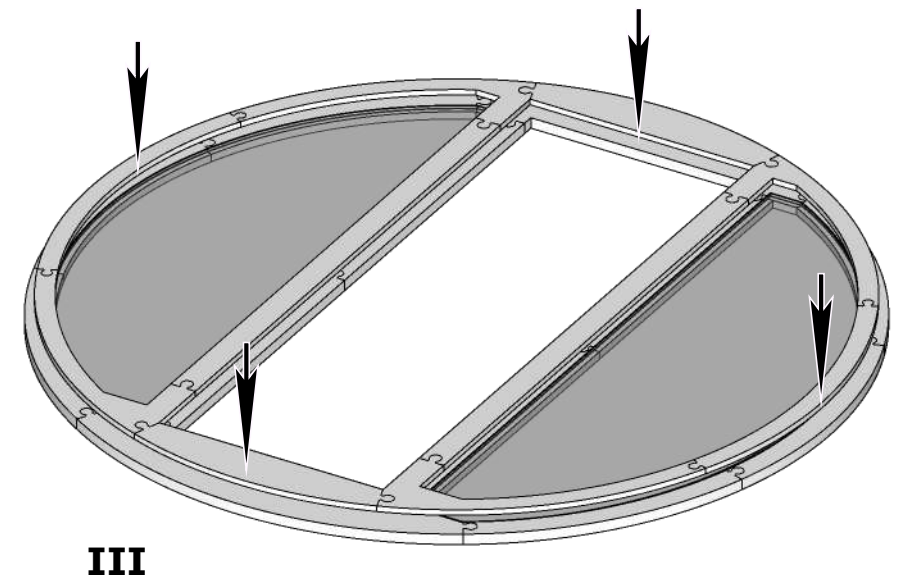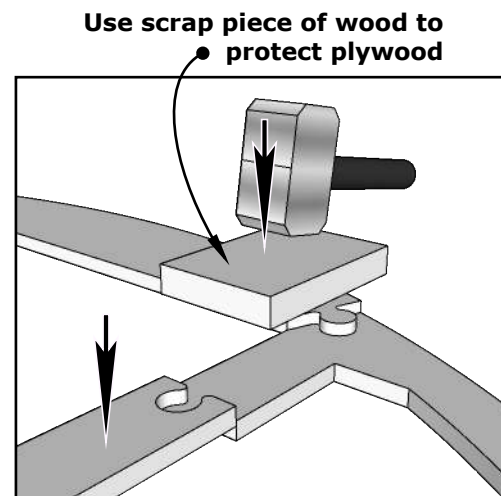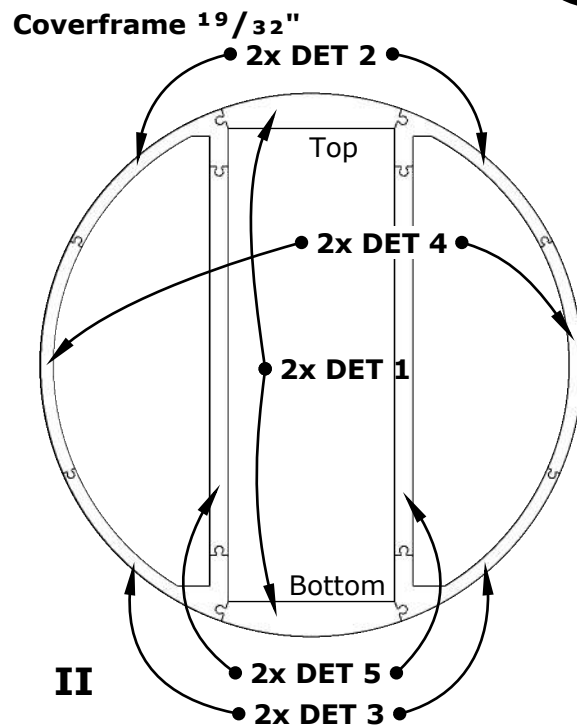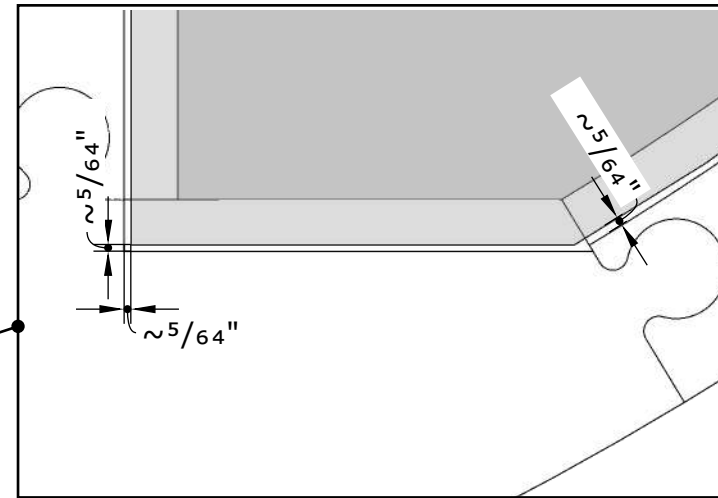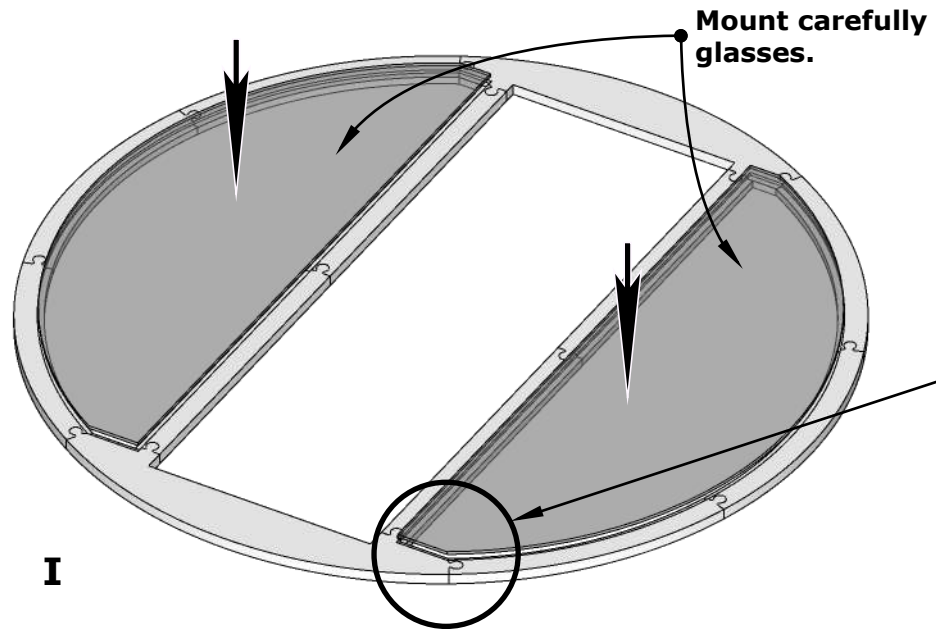


Front glass wall installation

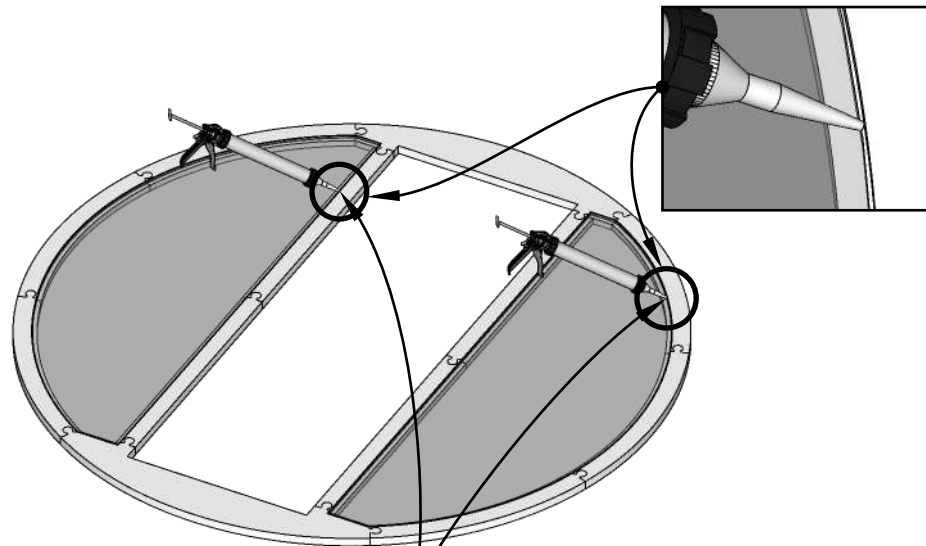

I Apply waterproof silicone to the groove

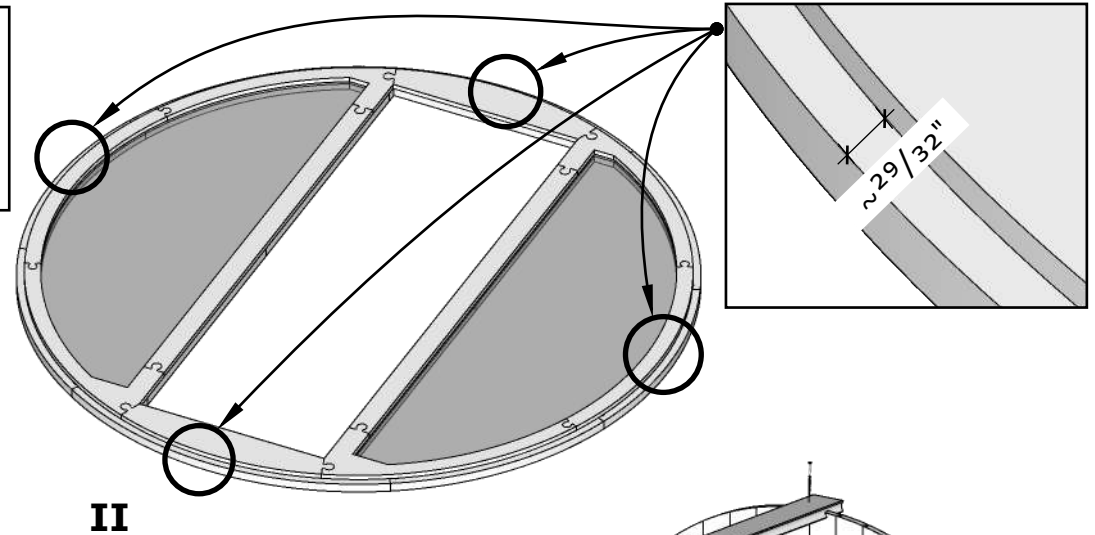


II

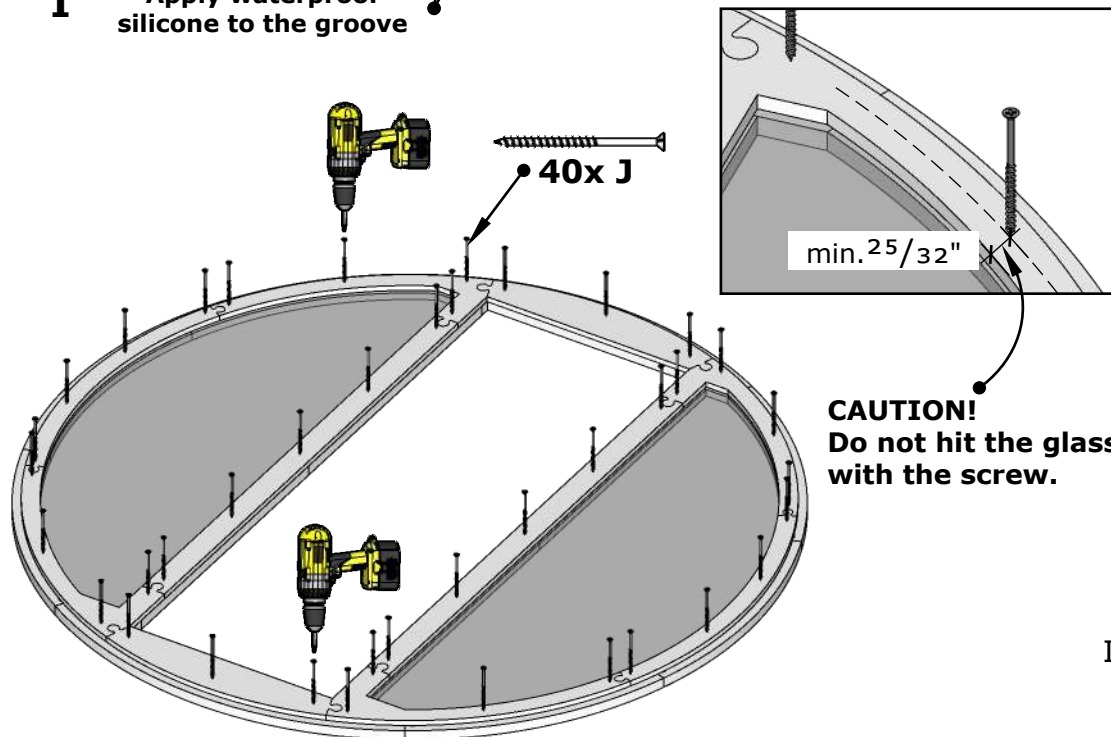


CAUTION!
Do not hit the glass with the screw.

III

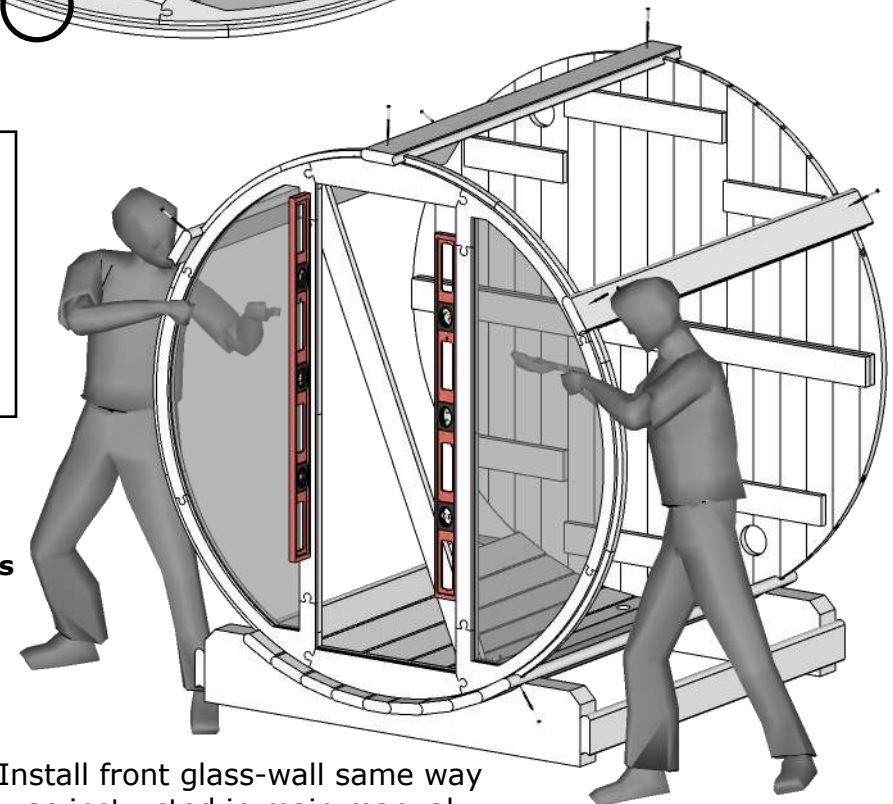



IV

Front glass wall installation

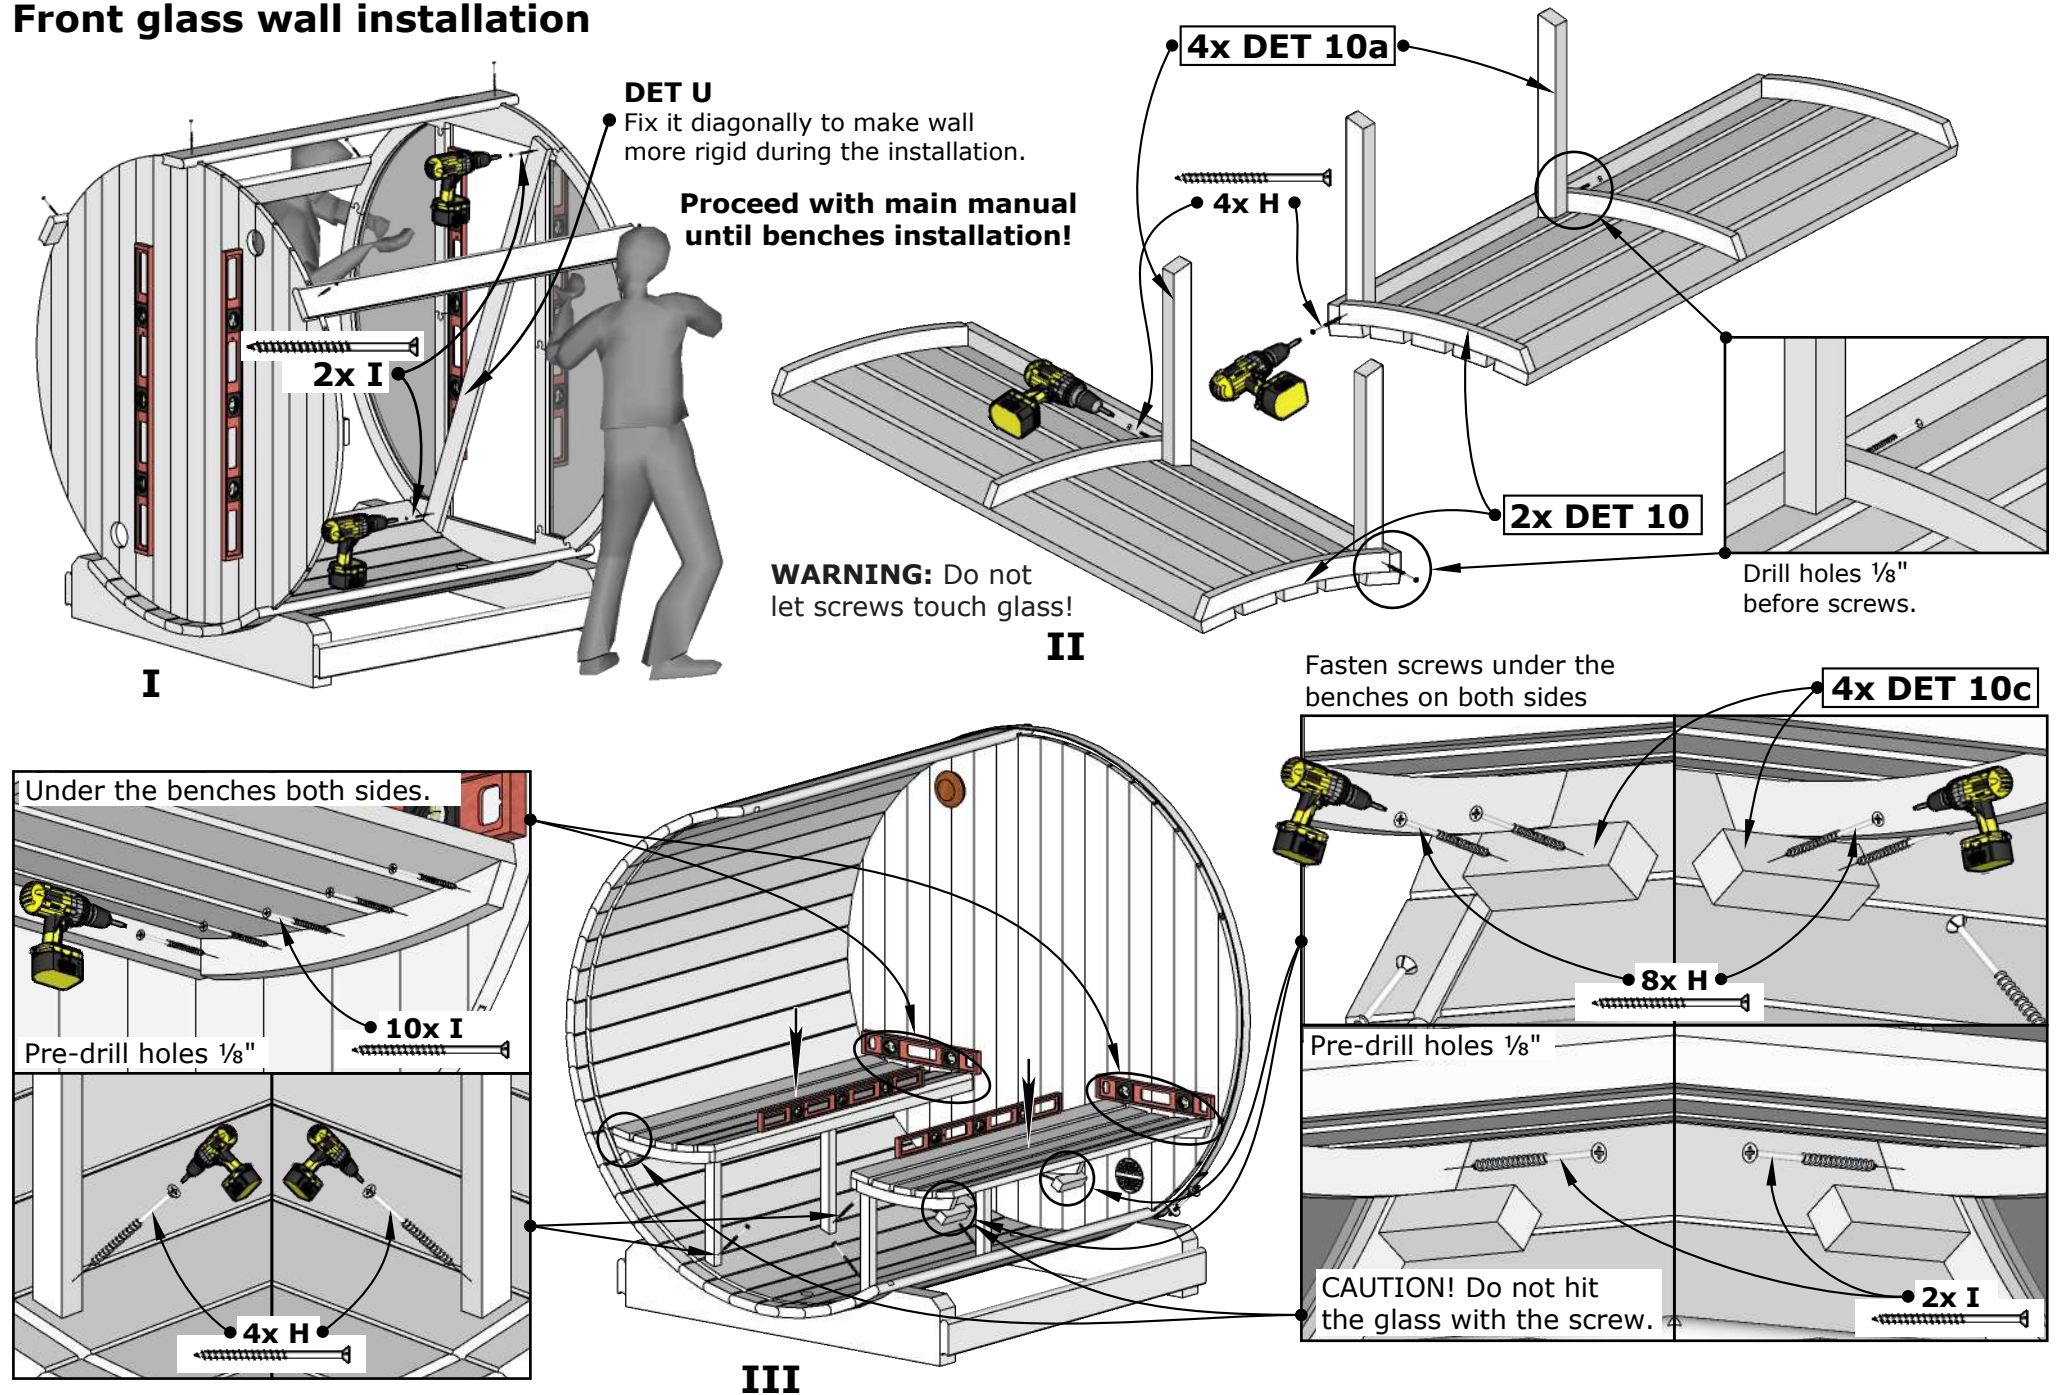



Wooden back wall assembly

Details

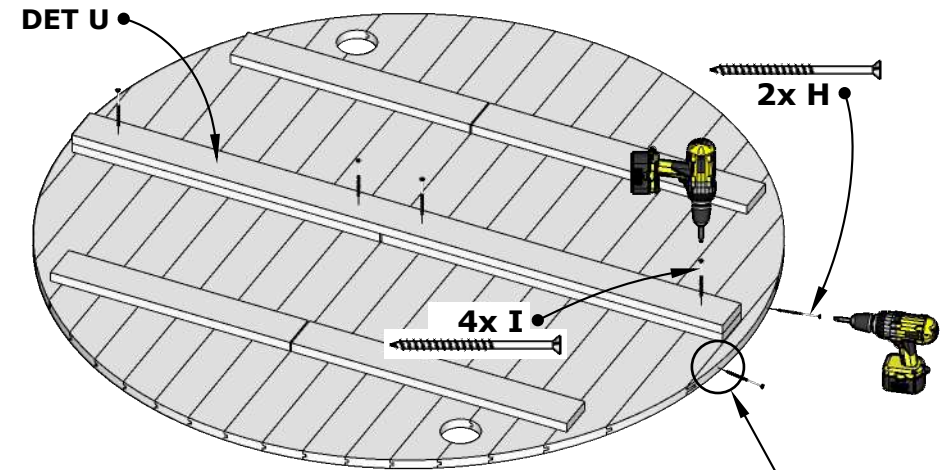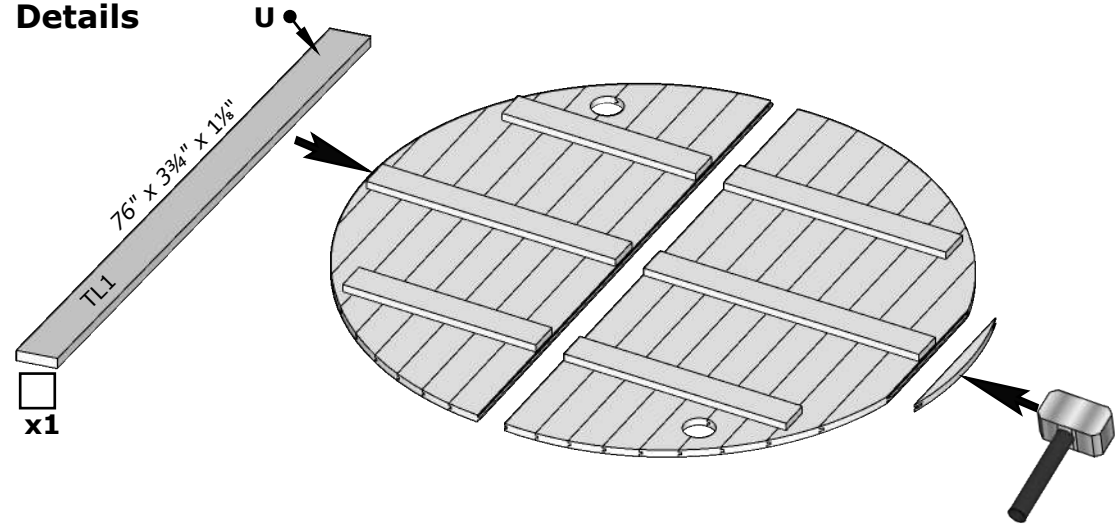

II


Pre-drill holes 5/32"
before screws.

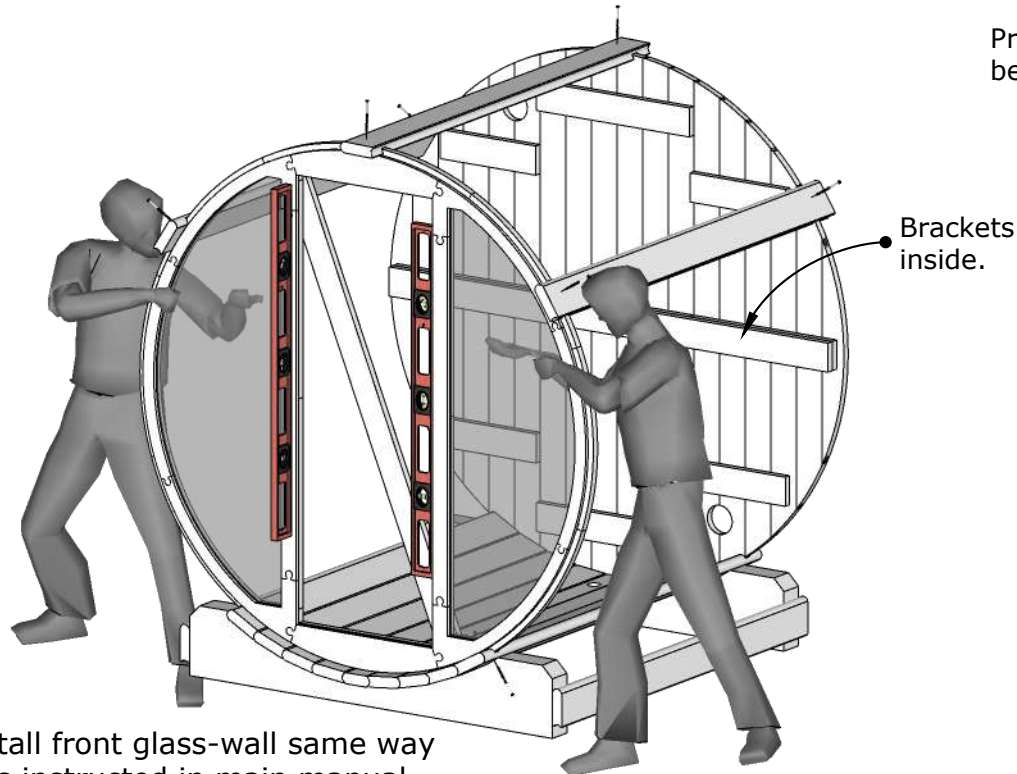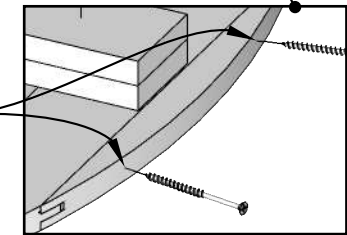

Install front glass-wall same way
as instructed in main manual.

III

E8G Barrel Sauna 87D" x 81H"

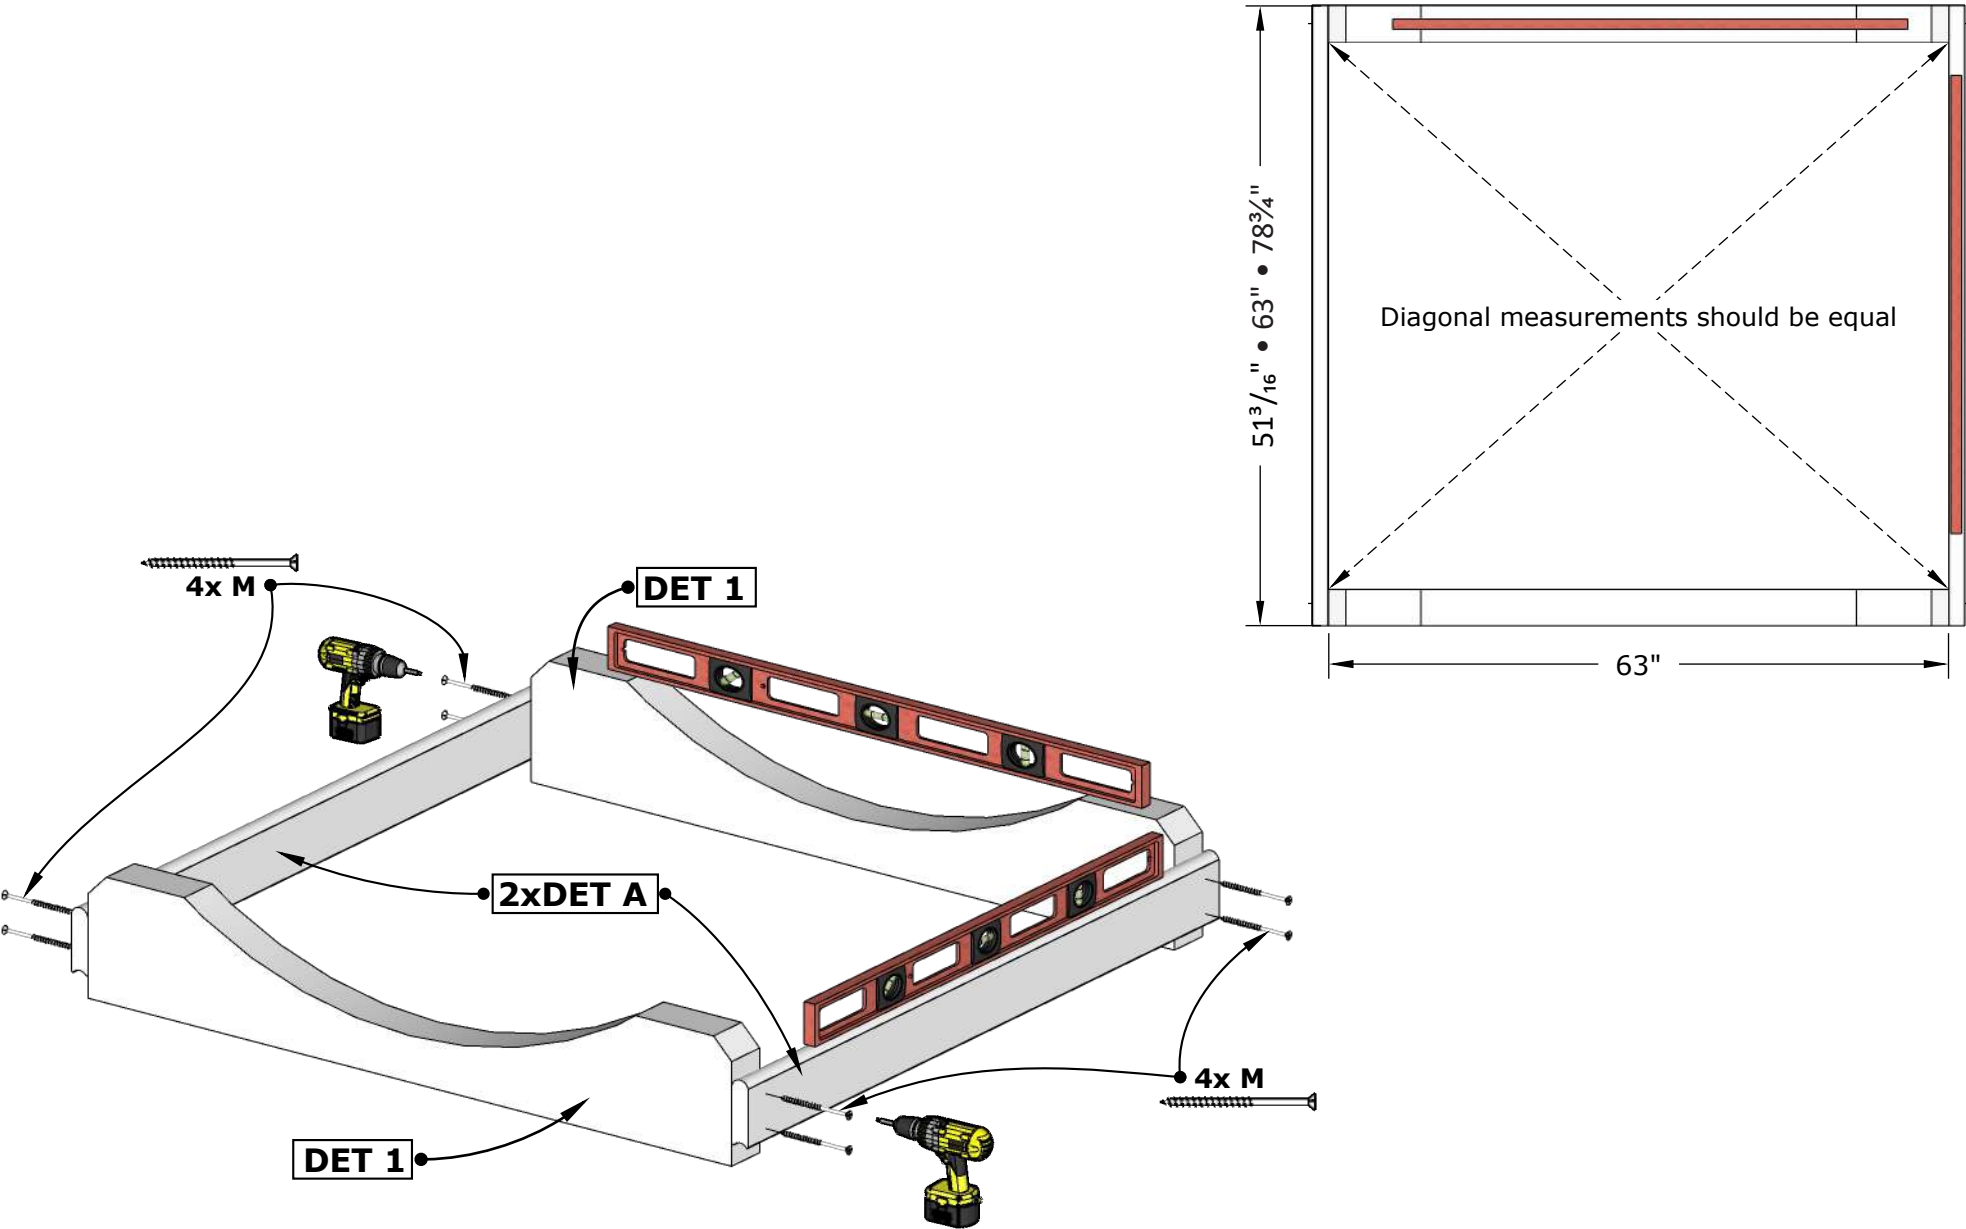

Center stave 2 on cradle 1

Position cradles inside grooves of stave 2

mm=mm

8x DET 3

II

DET 2

I

2x M

W

Y

Z


X

3

2




3

E8G Barrel Sauna 87D" x 81H"

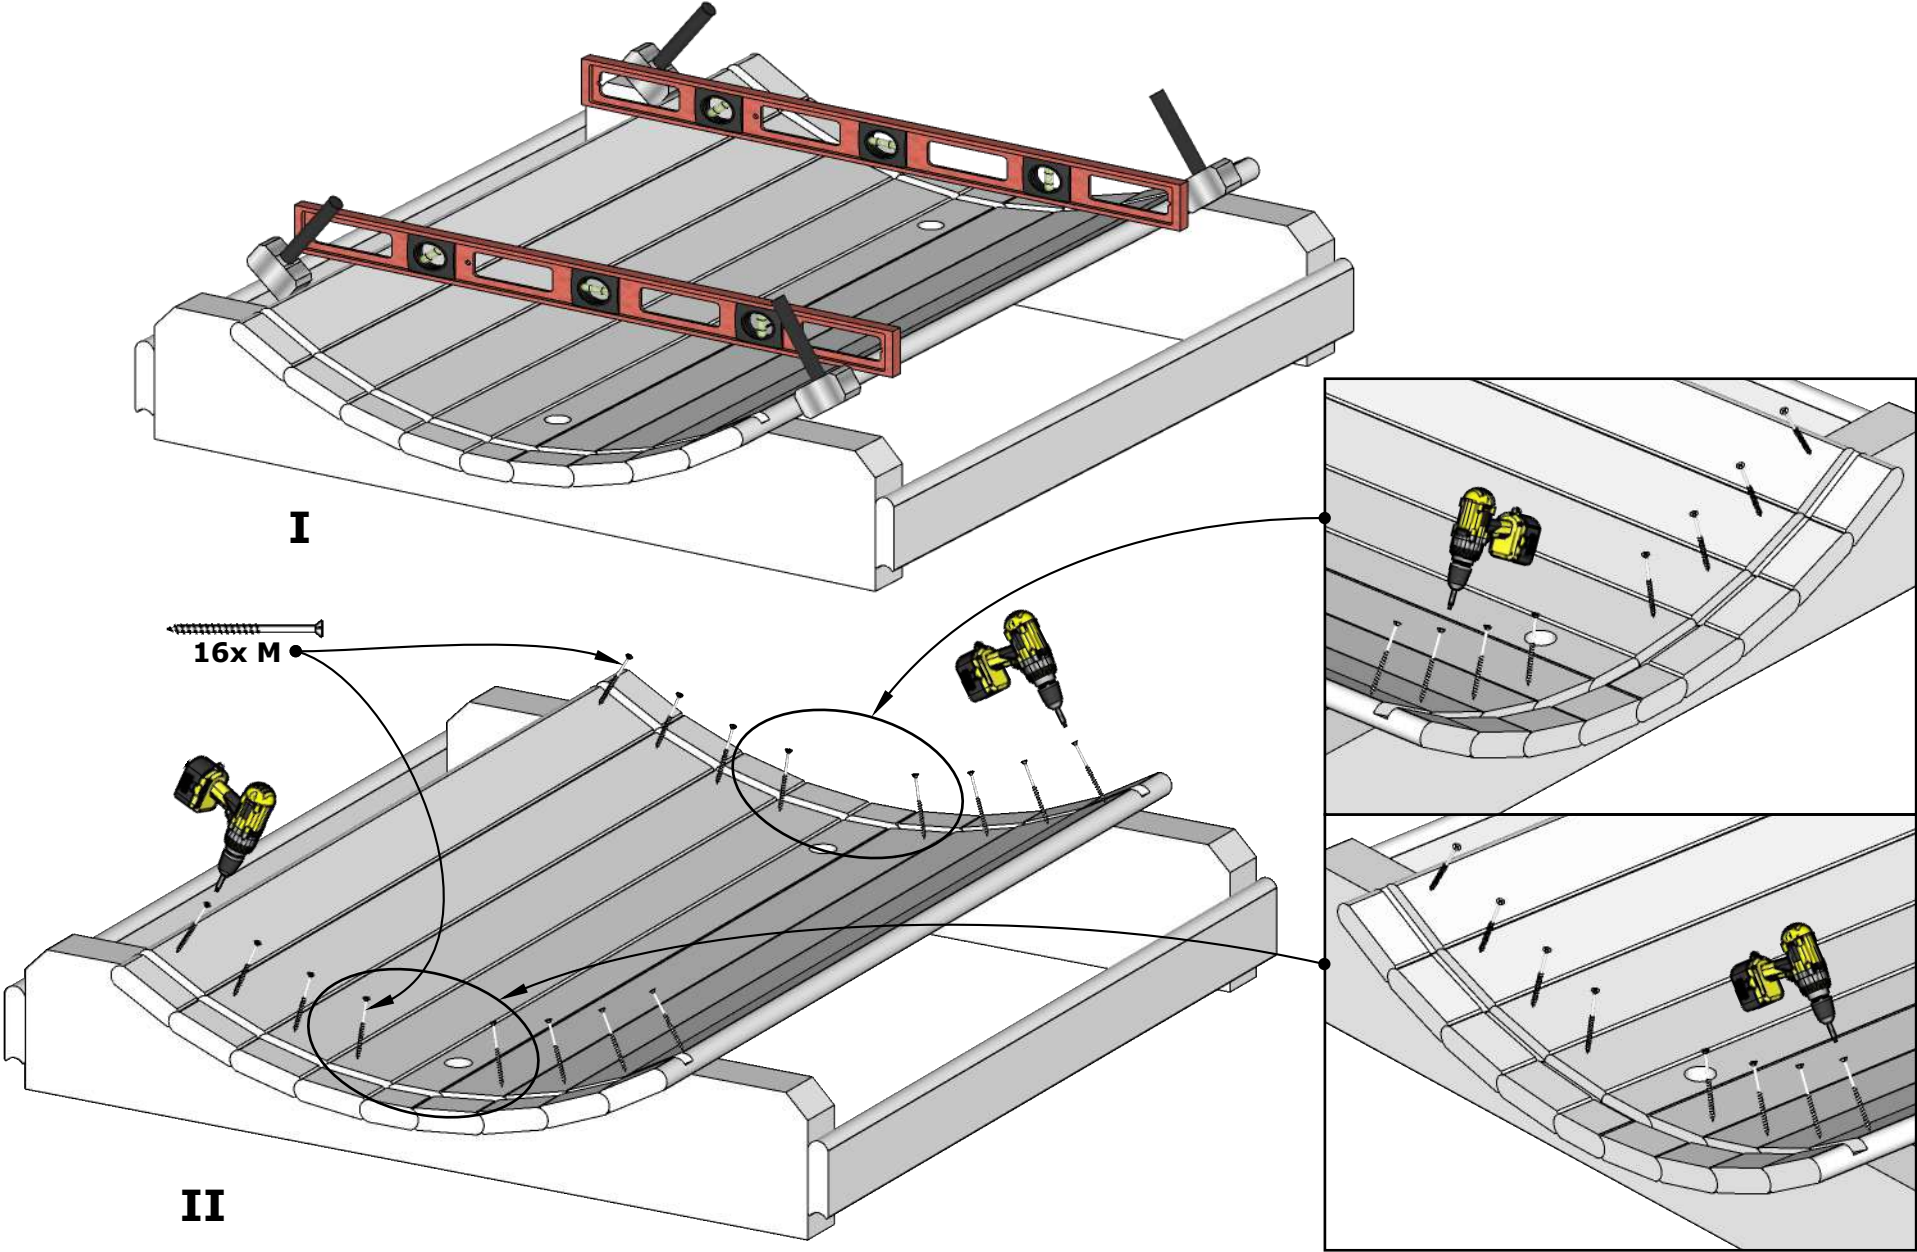


E8G Barrel Sauna 87D" x 81H"


Drill 4 holes Ø1/2"
through DET 2
outside

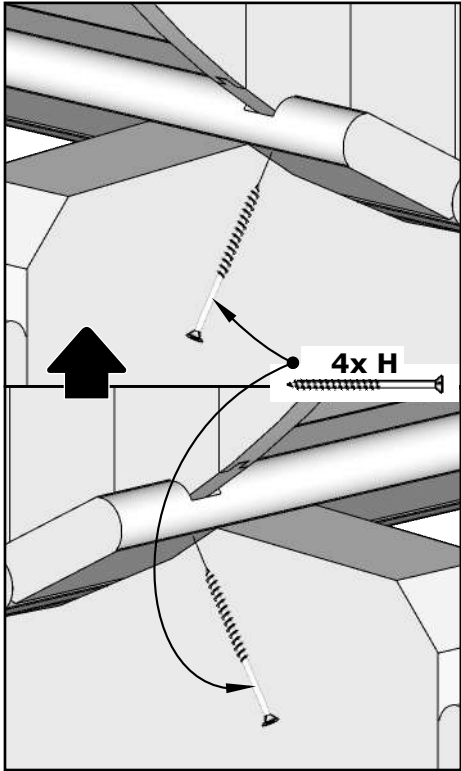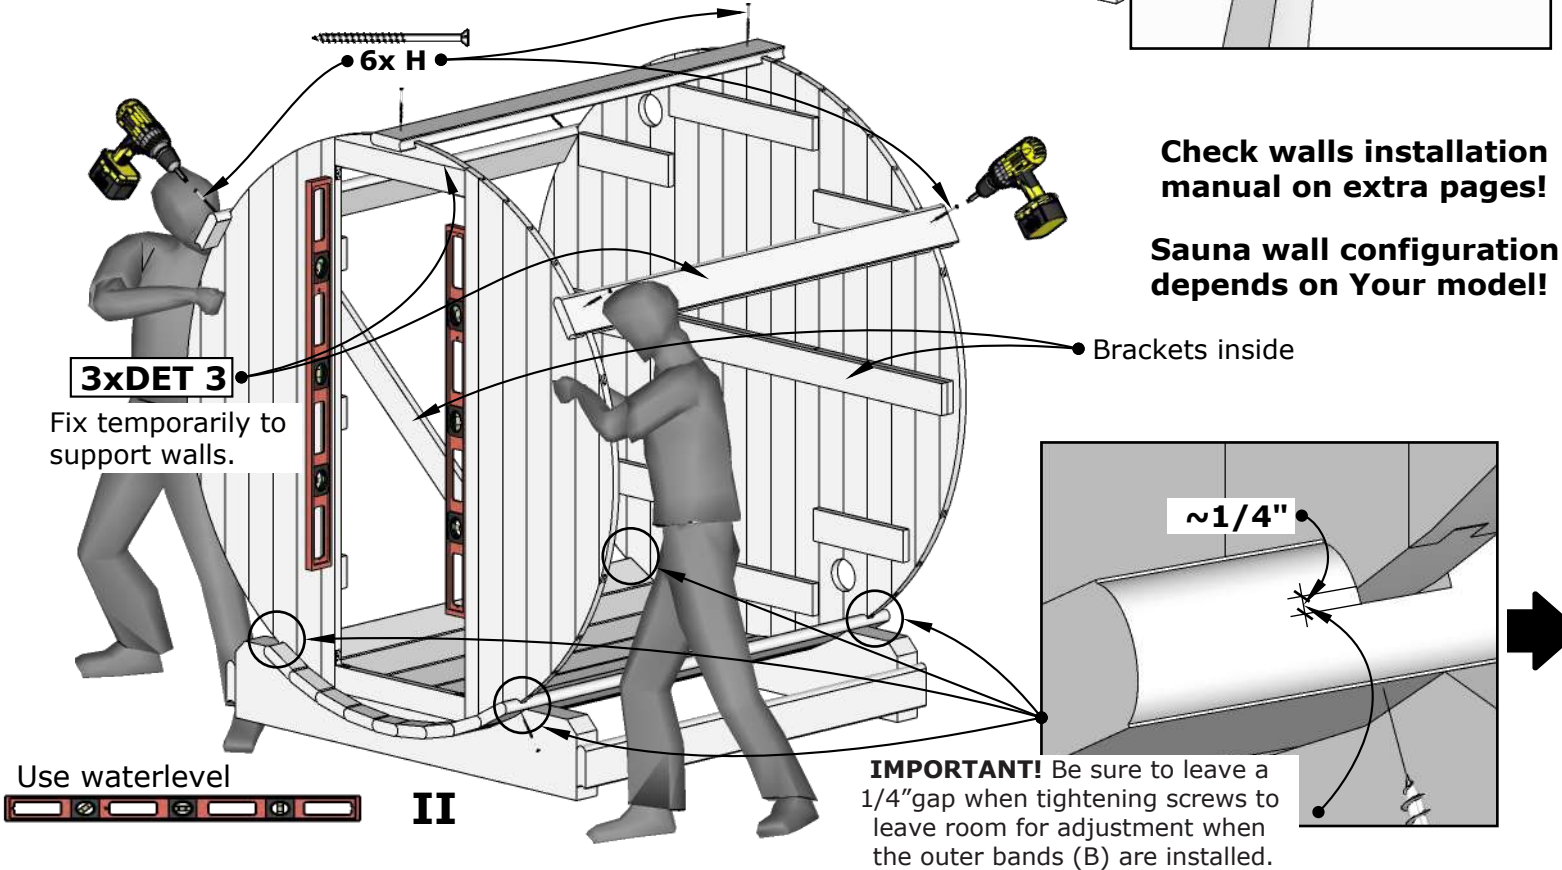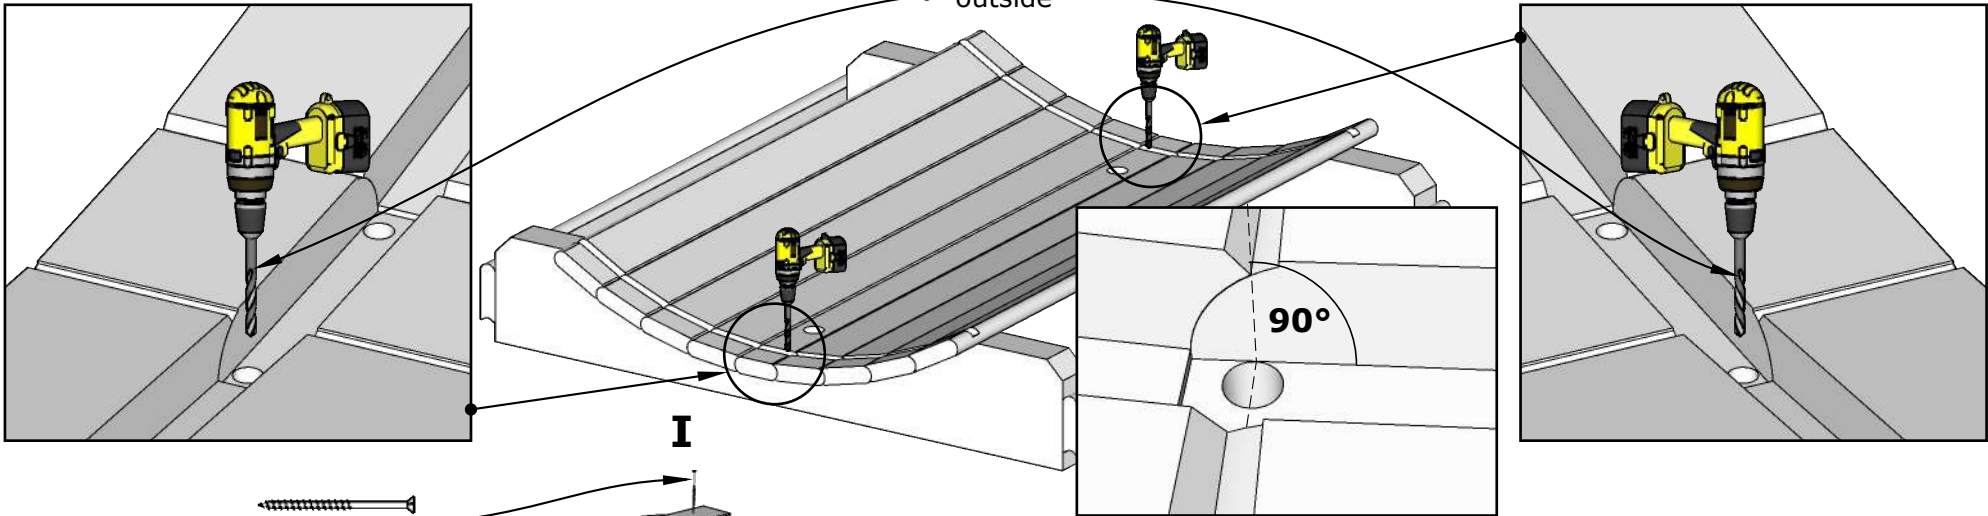


E8G Barrel Sauna 87D" x 81H"

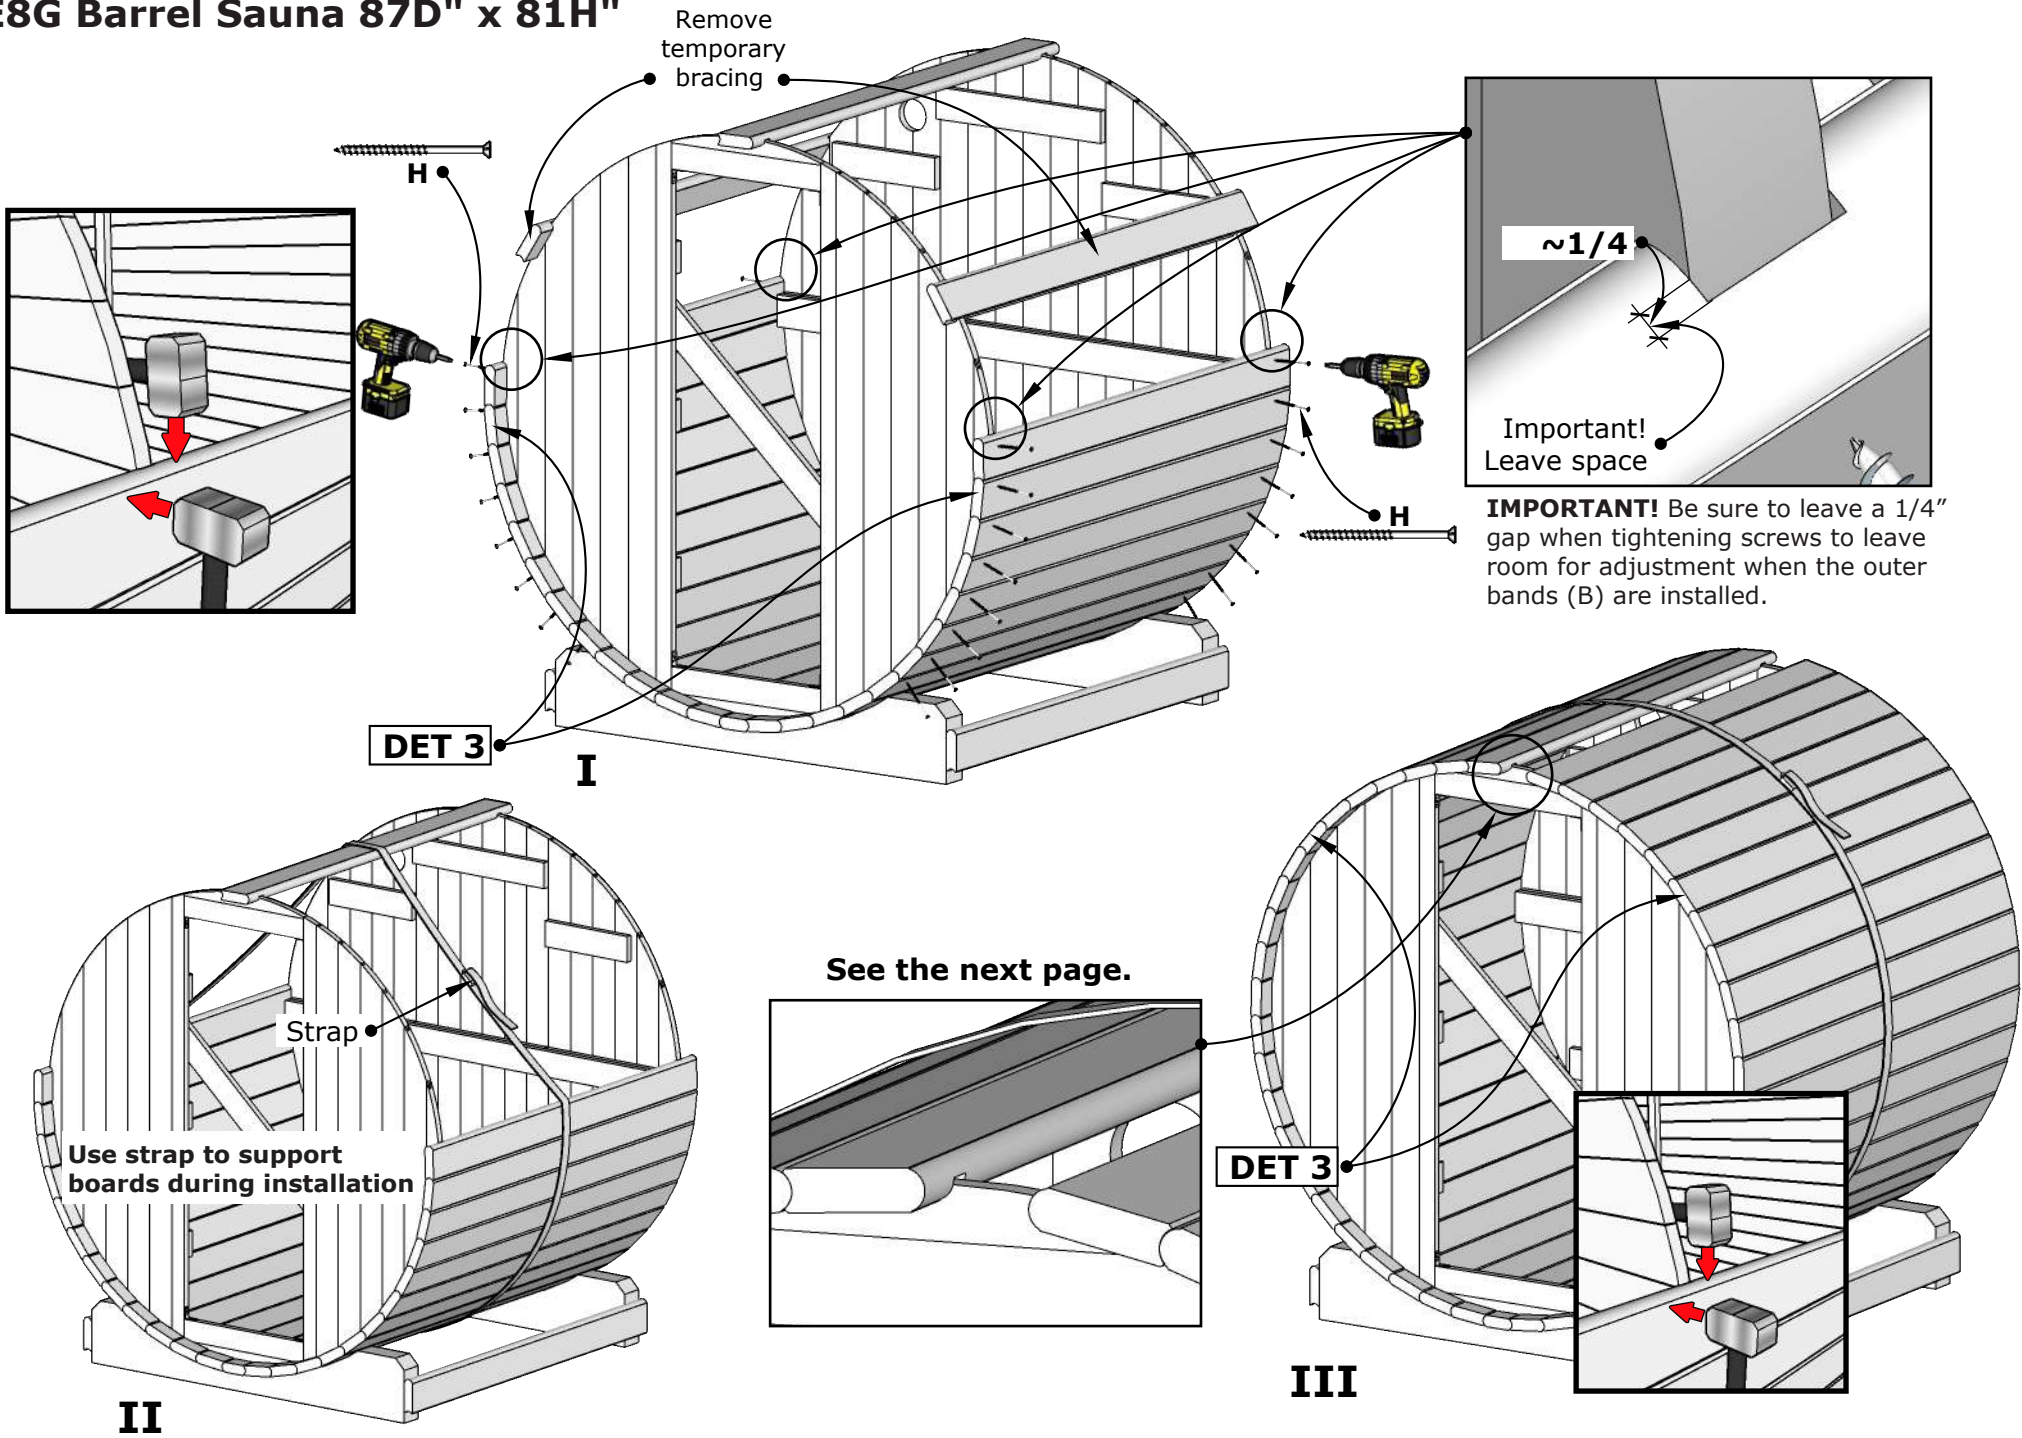


E8G Barrel Sauna 87D" x 81H"

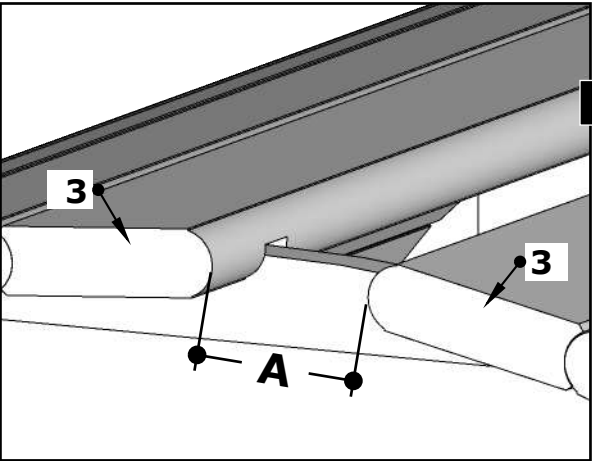


I

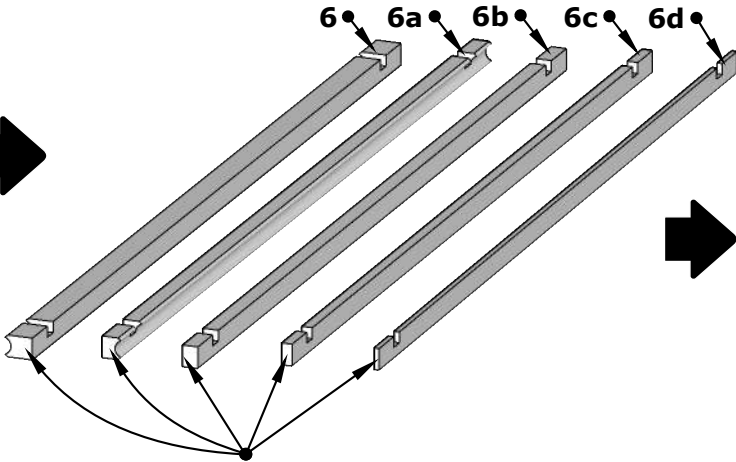

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

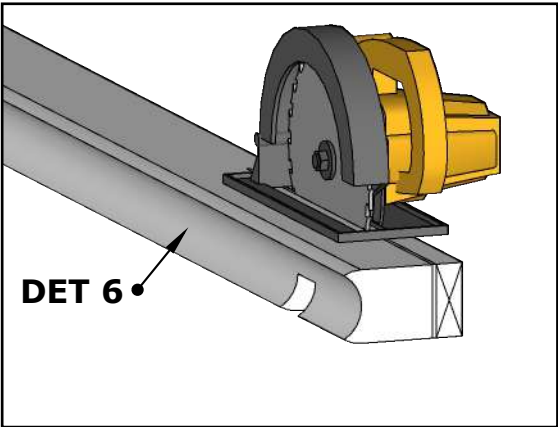


If needed, trim the flat edge of the board to create the desired width.

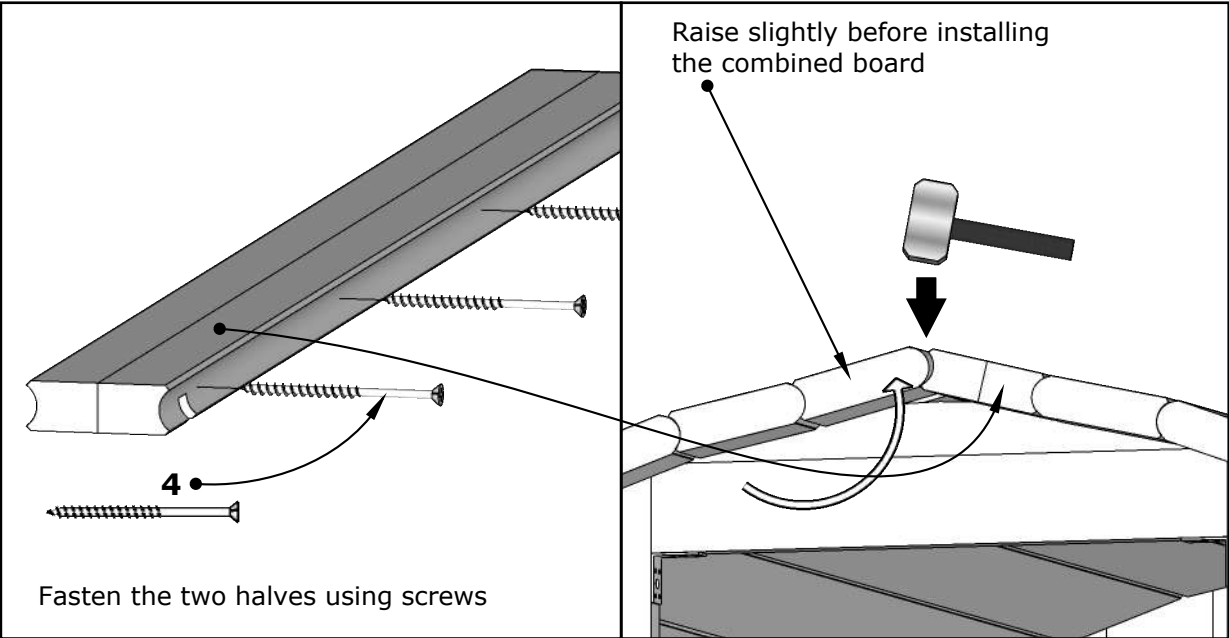


Fasten the two halves using screws

II

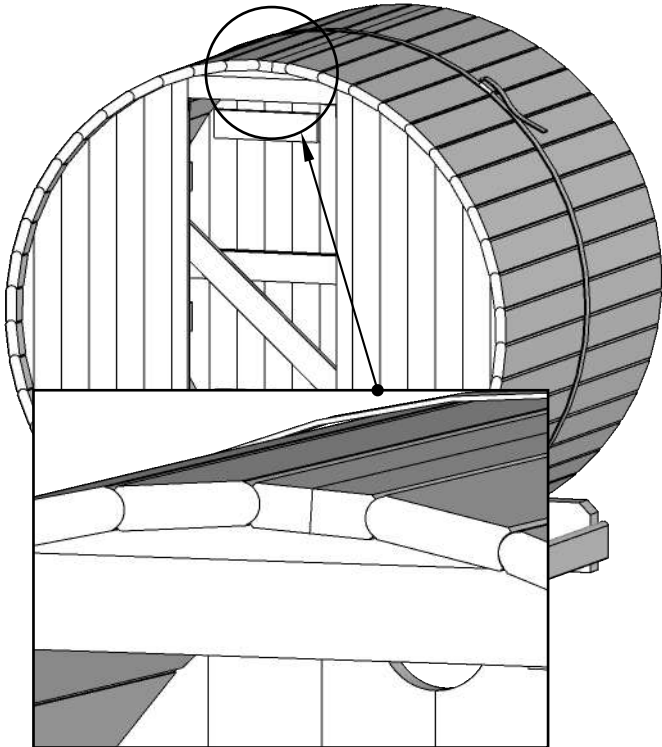


III





E8G Barrel Sauna 87D" x 81H"

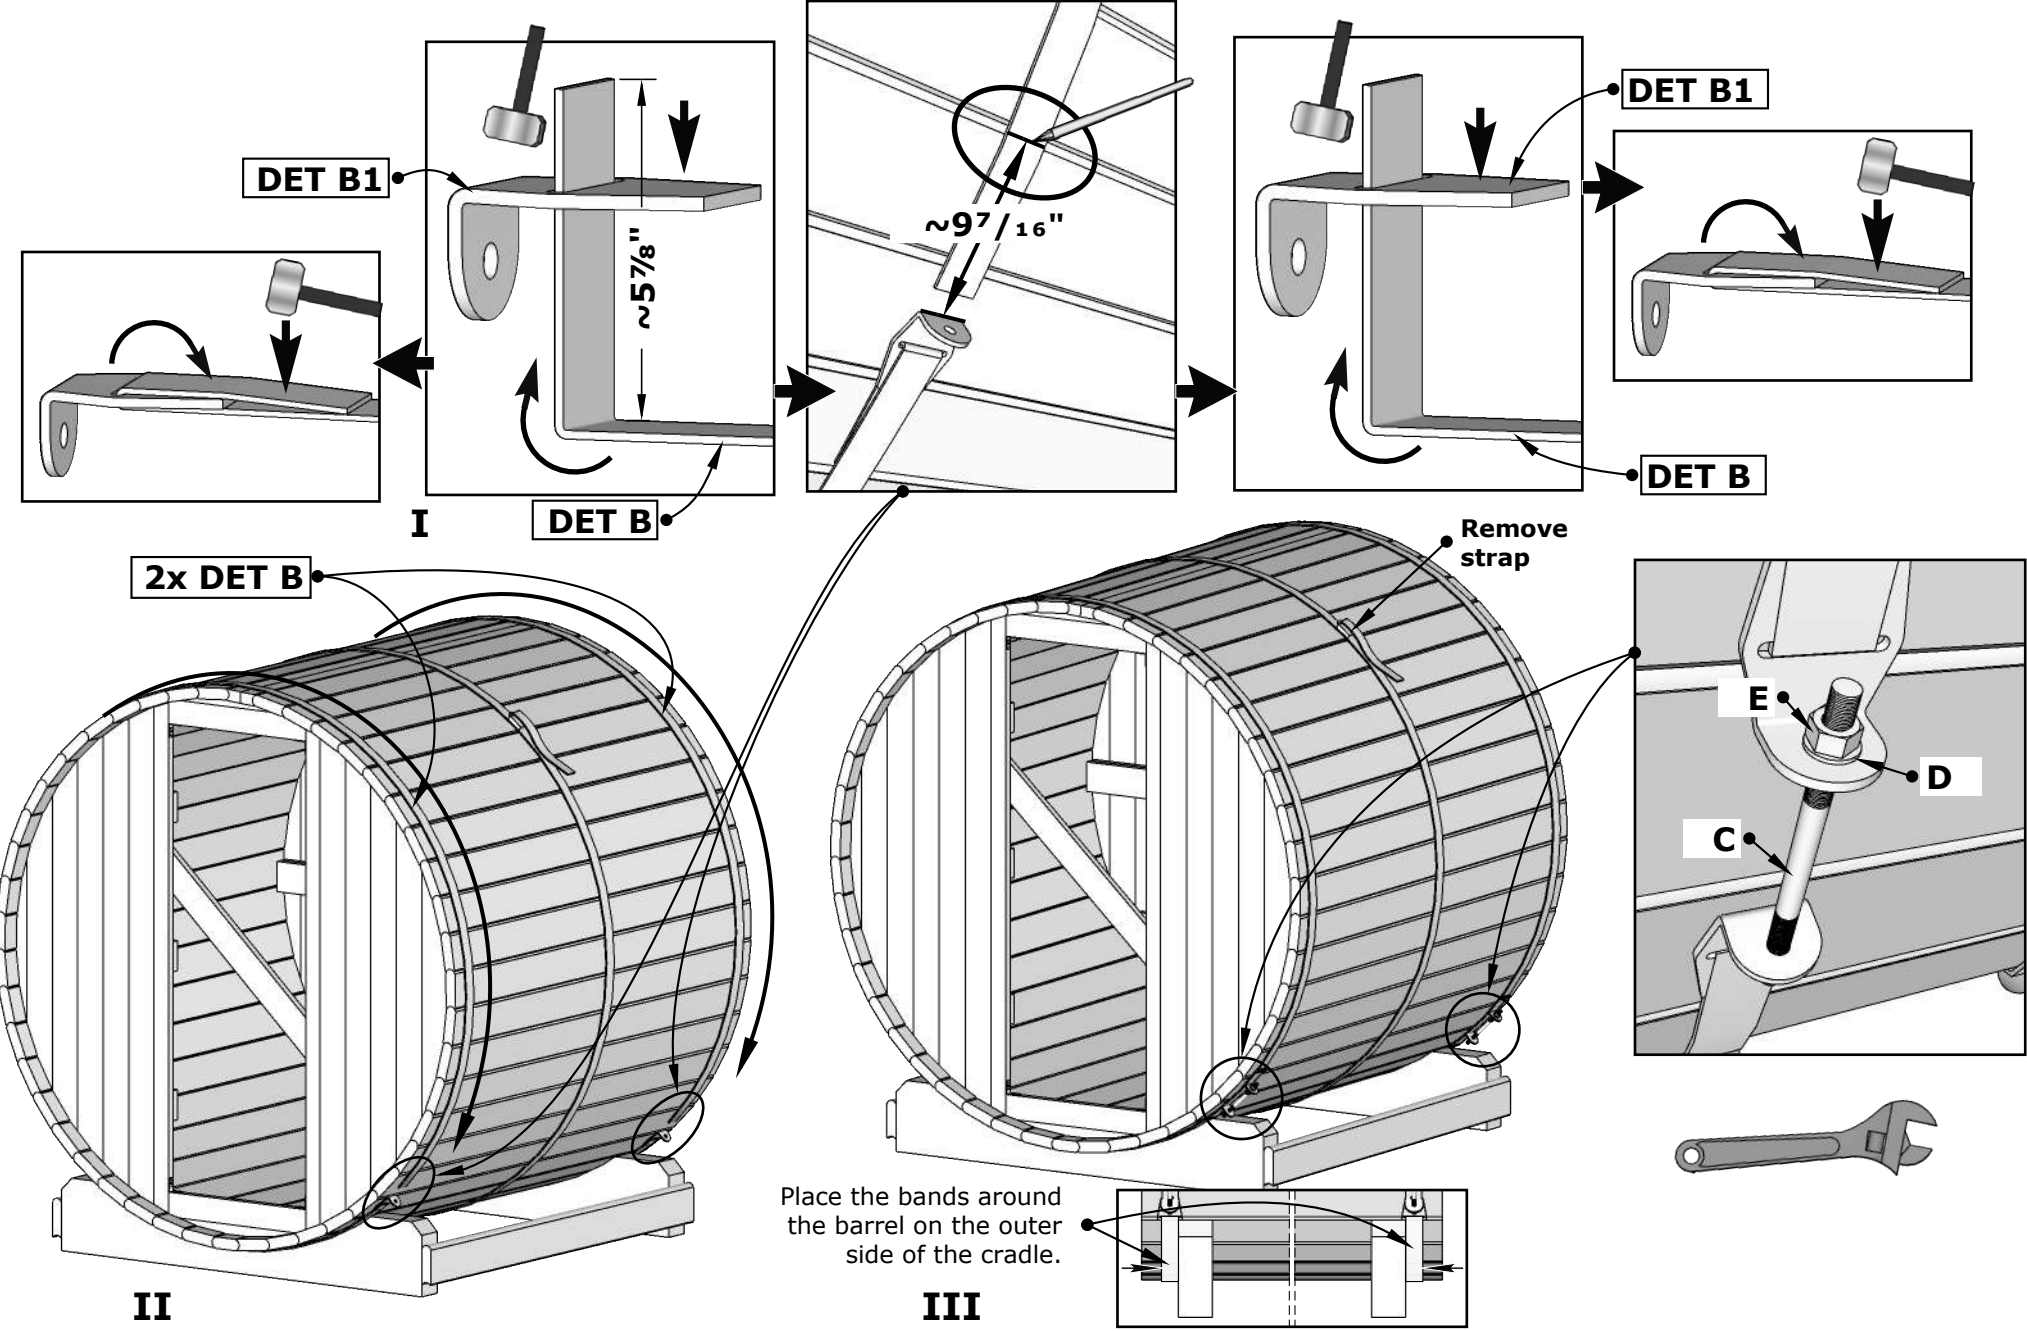





E8G Barrel Sauna 87D" x 81H"

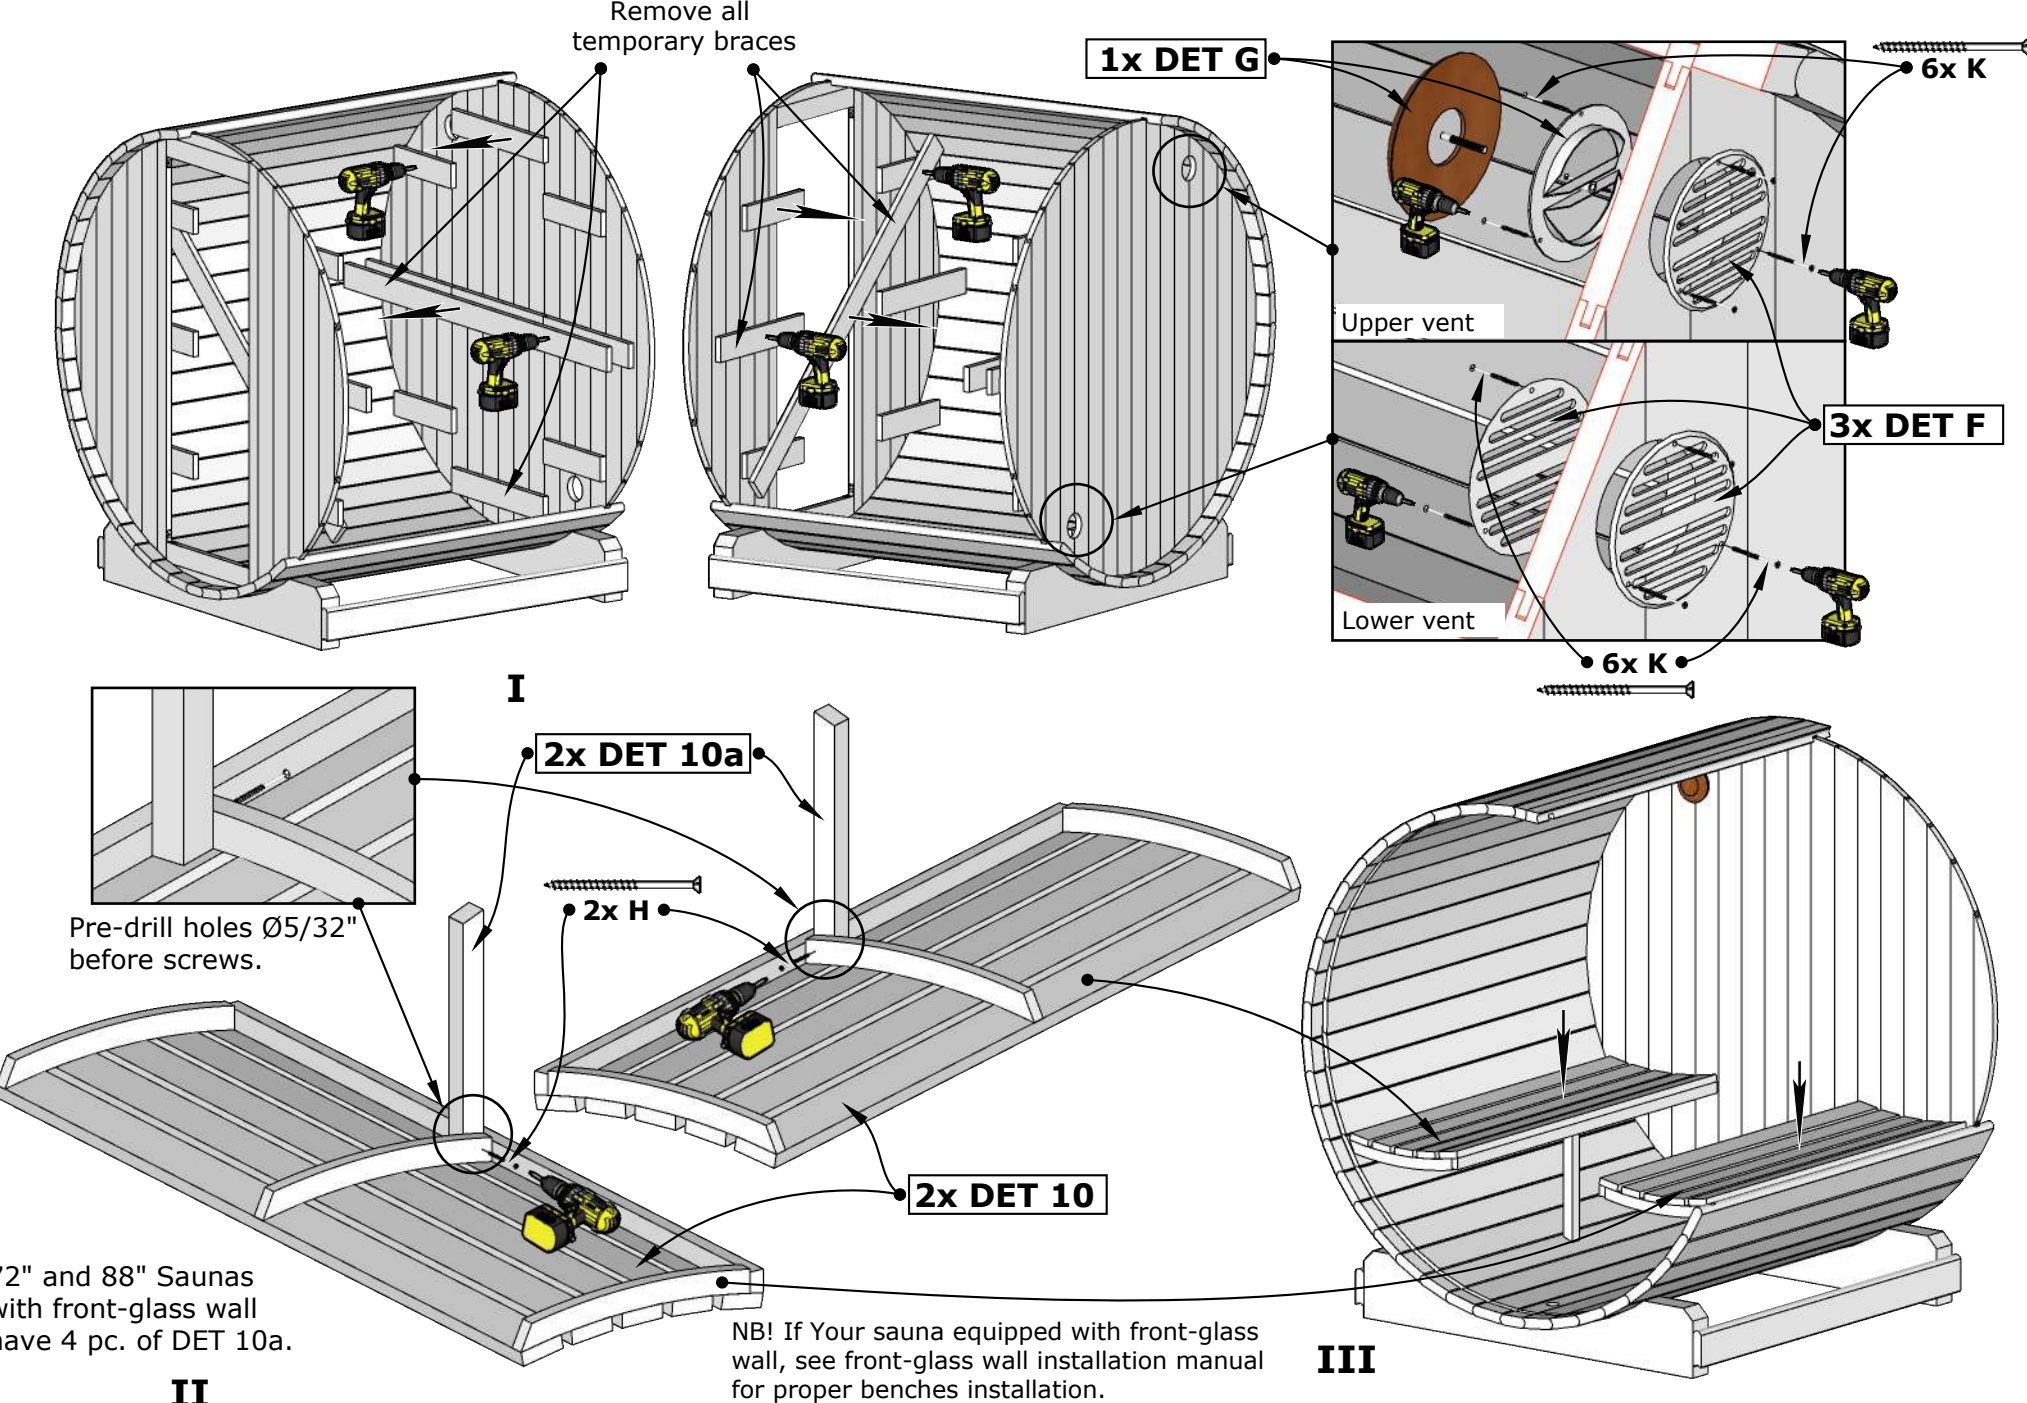





E8G Barrel Sauna 87D" x 81H"

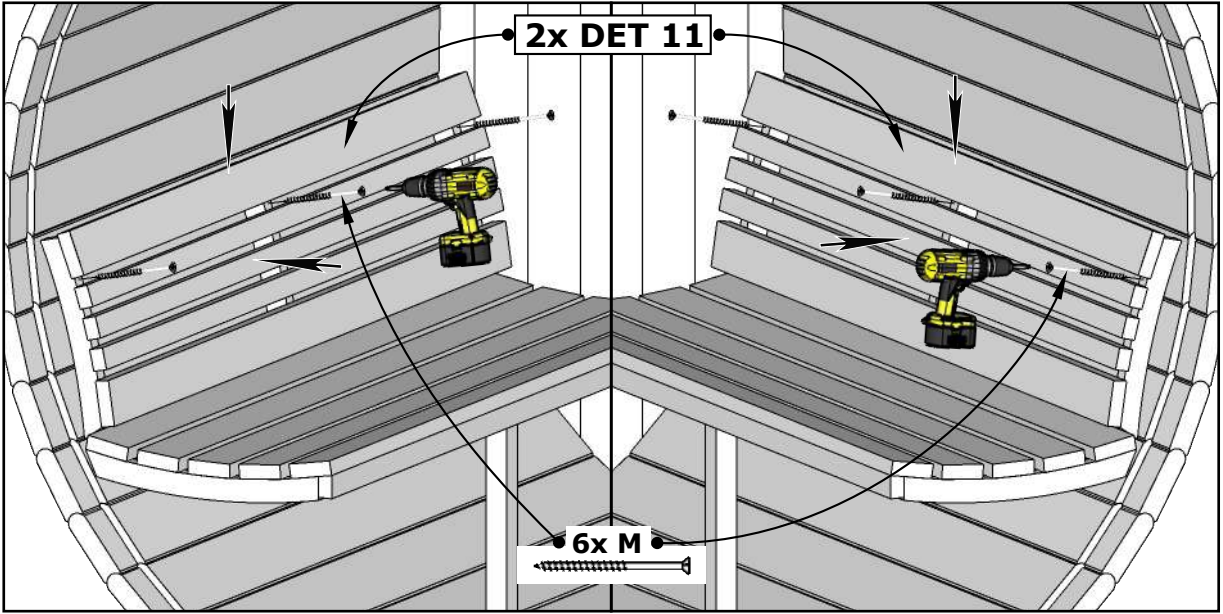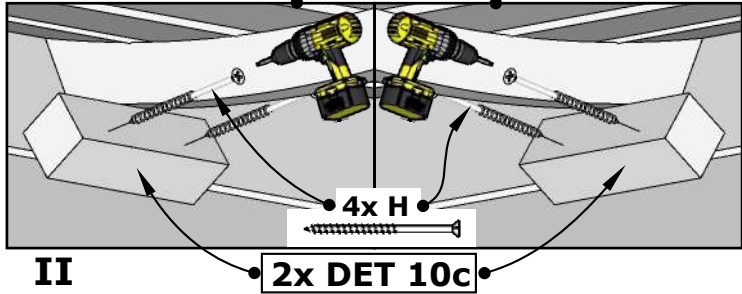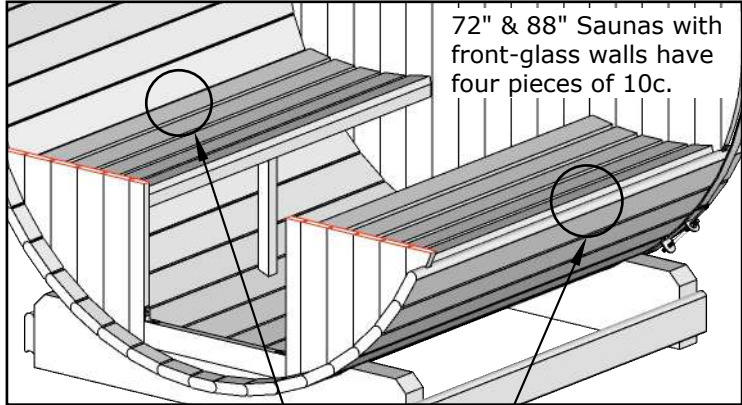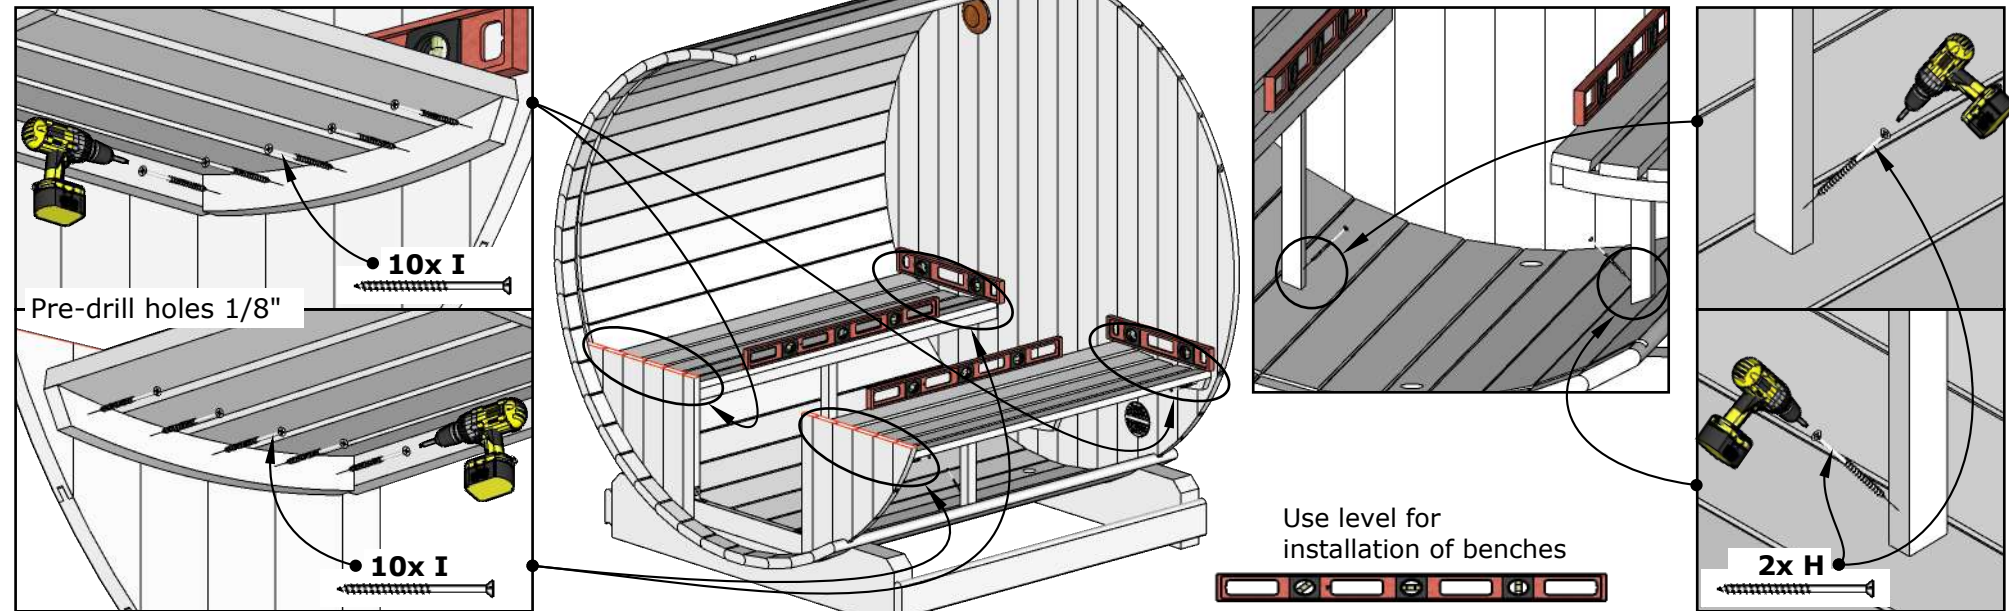

E7G Barrel Sauna 71D" x 81H"

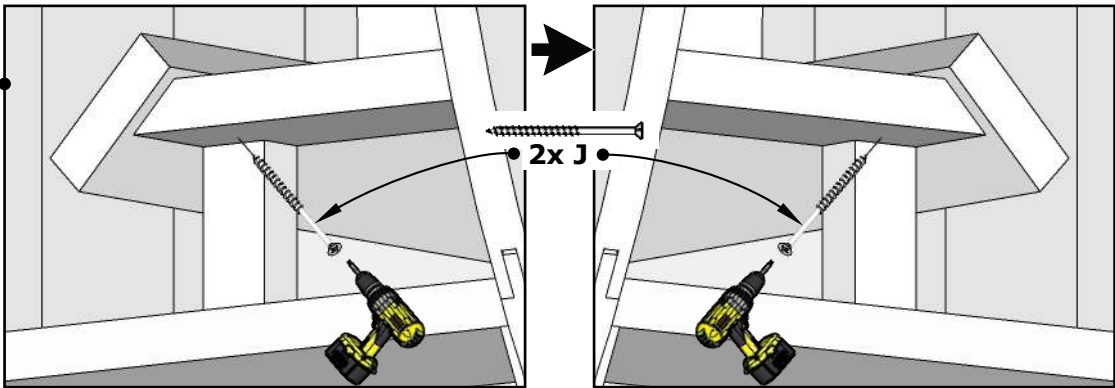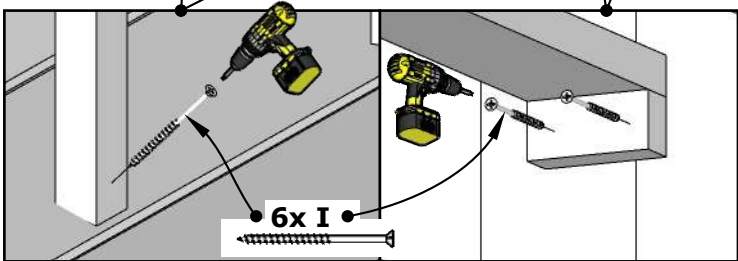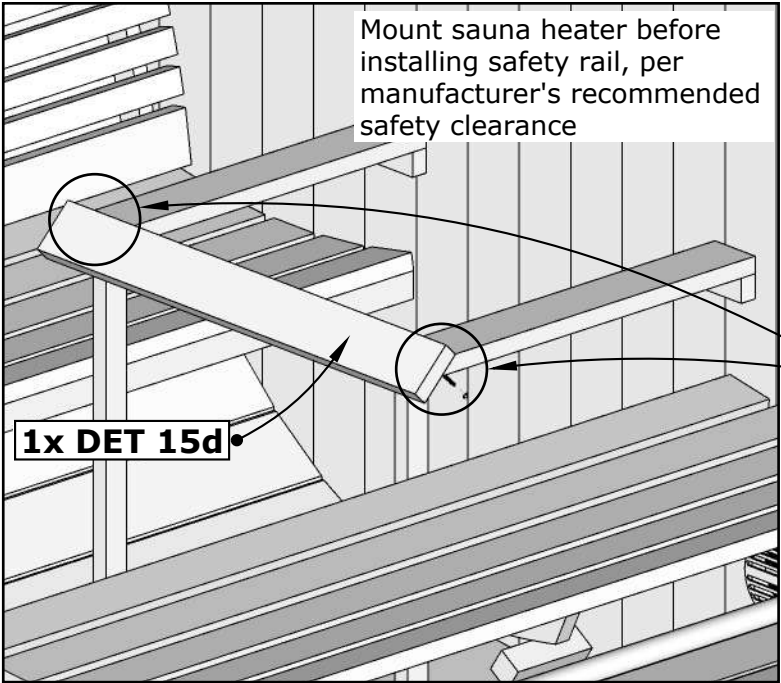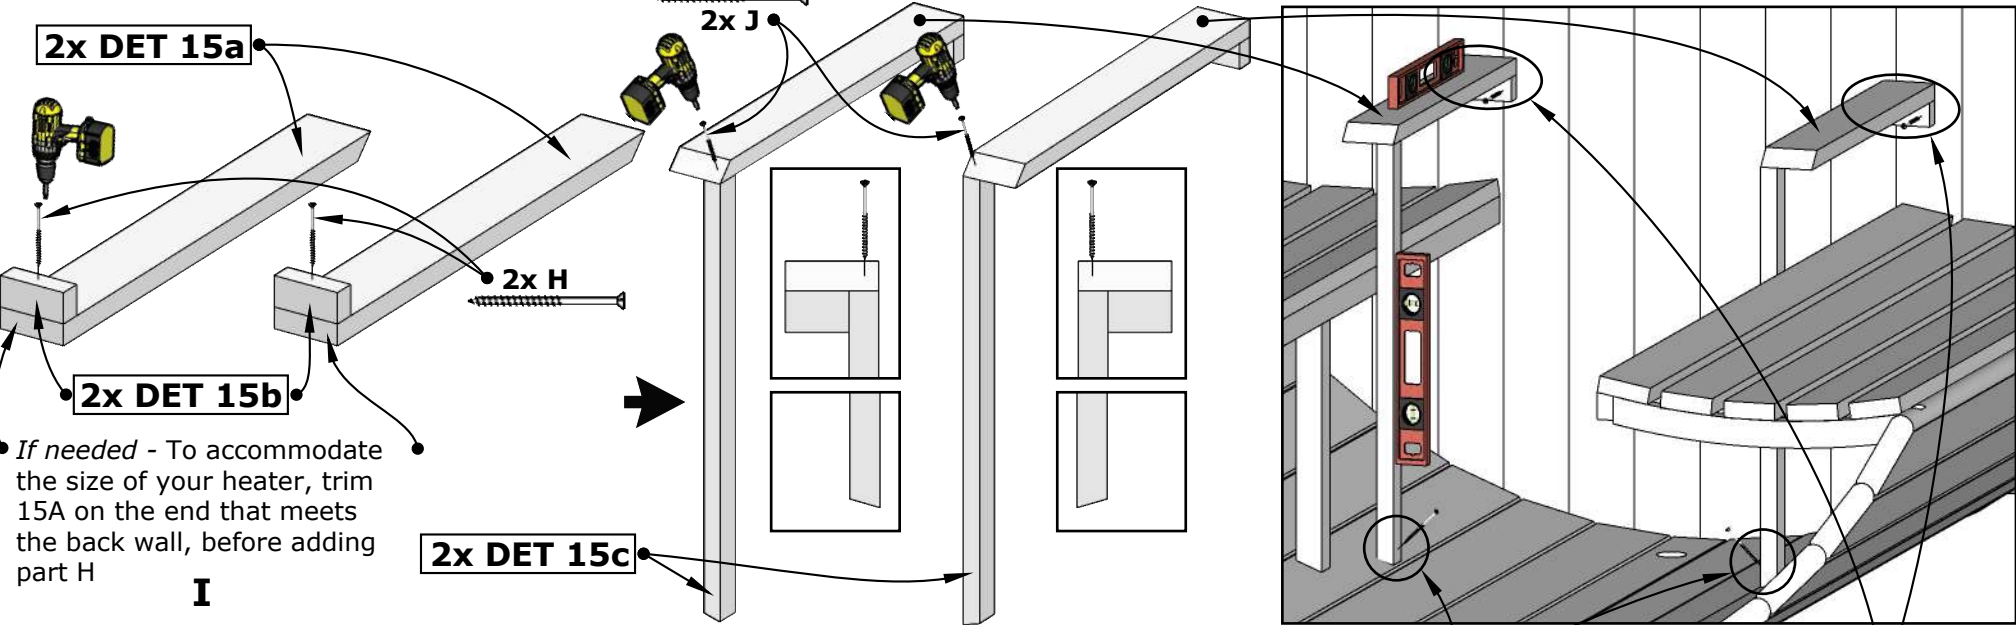


E8G Barrel Sauna 87D" x 81H"

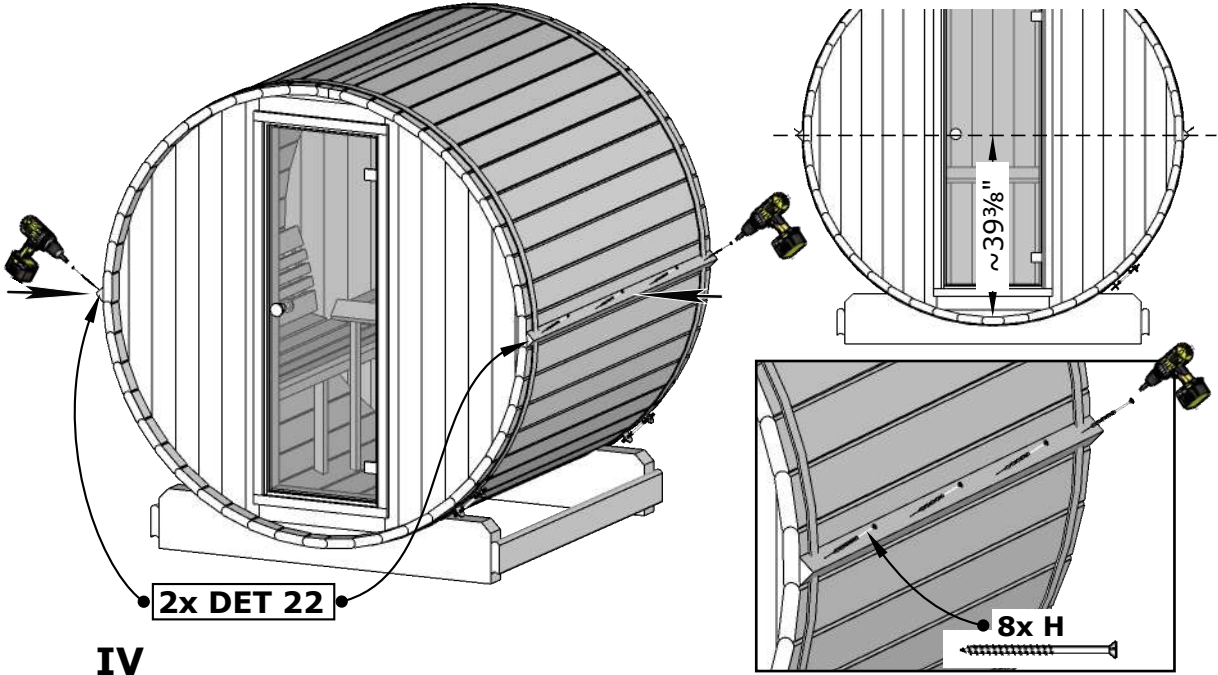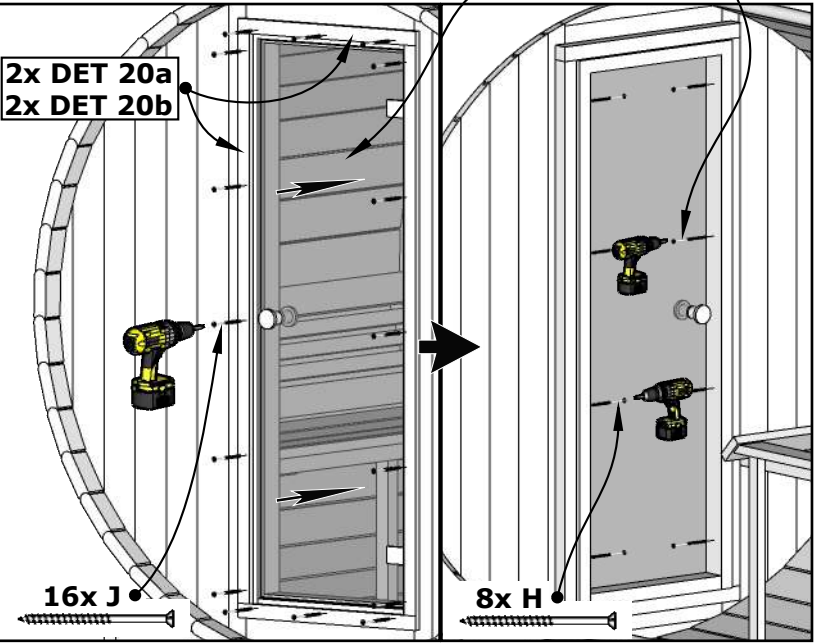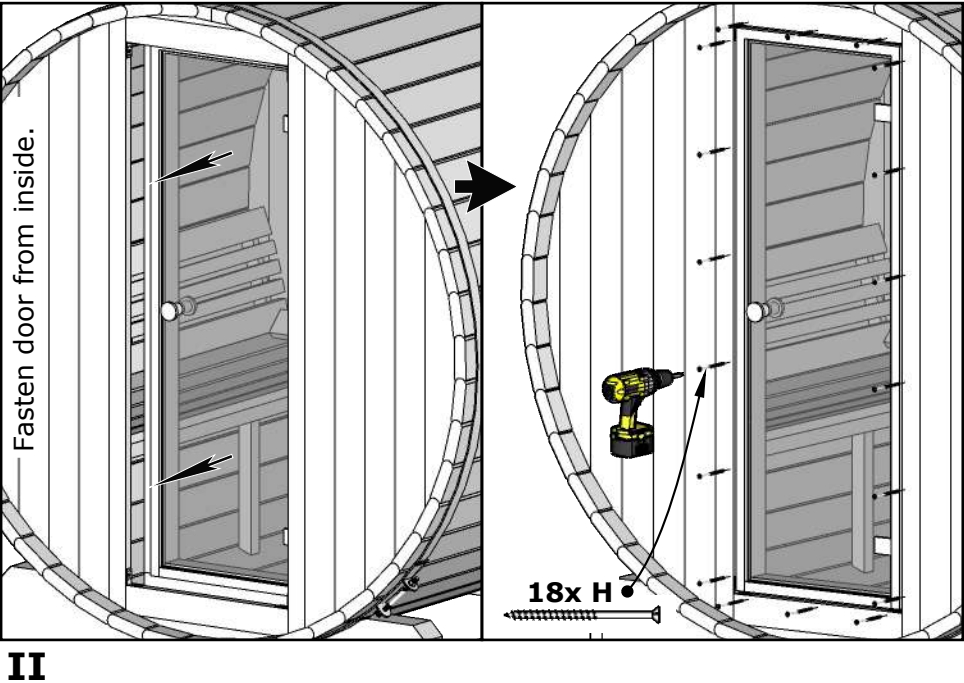
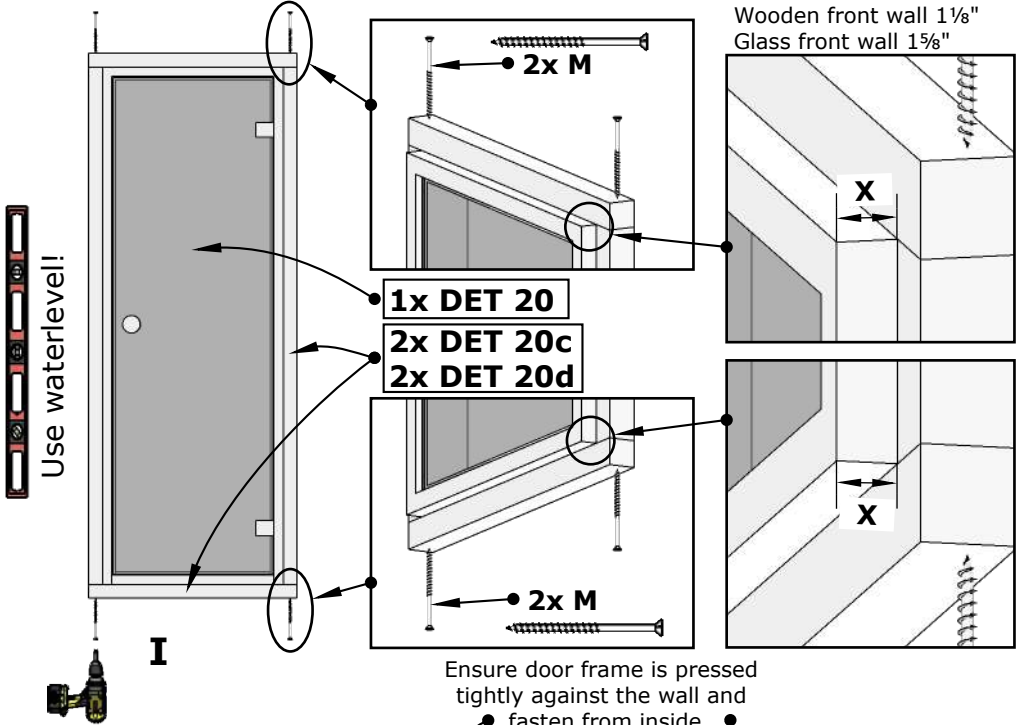


E8G Barrel Sauna 87D" x 81H"

See the installation manual inside the shingles package

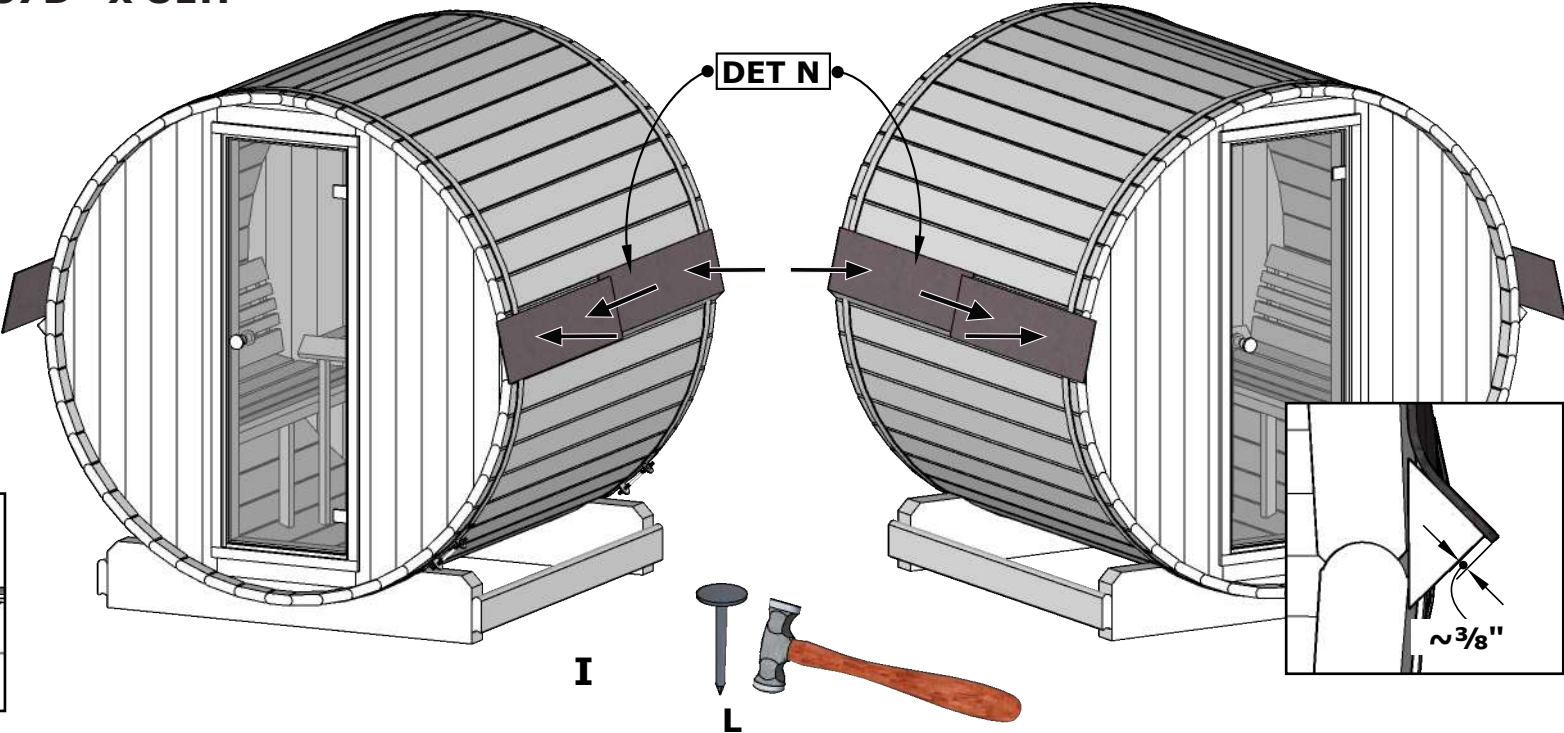

Check also roof shingles installation manual inside package.

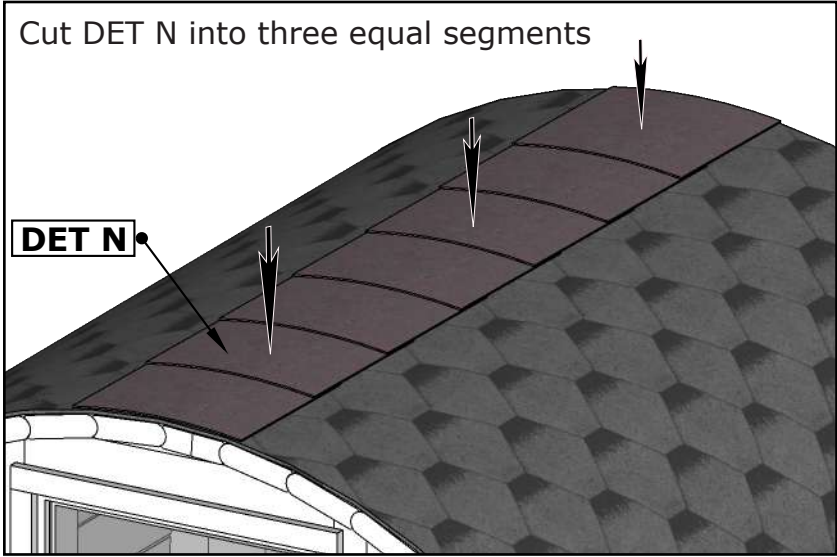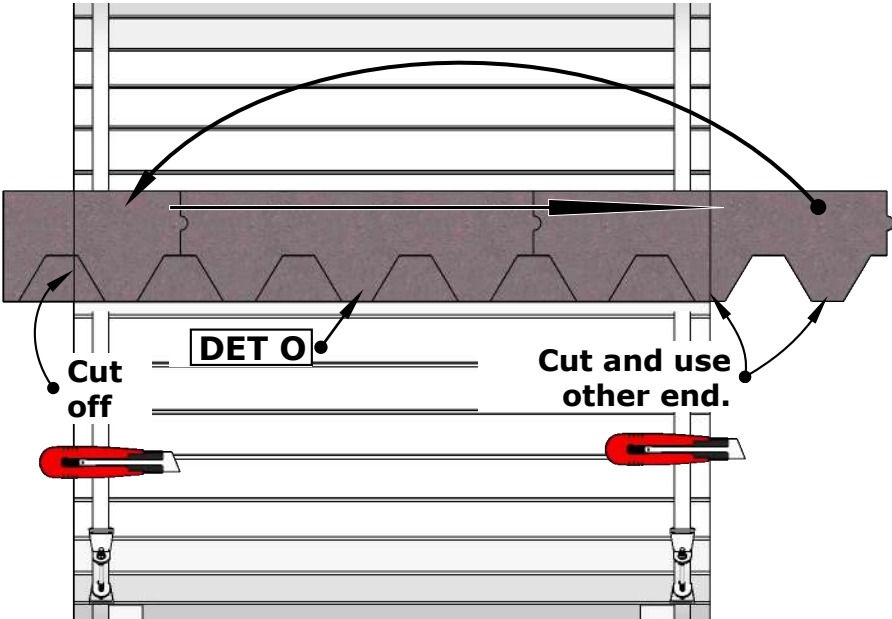

E8G Barrel Sauna 87D" x 81H"

